

NSC10 NETWORK CAMERA

USER MANUAL

MODEL 503792



INT-503792-UM-0608-04

Contents

1.	Introduction.....	1
2.	Package Content.....	1
3.	System Requirement.....	1
4.	Hardware Installation.....	2
4.1.	LED and Focusing	2
4.2.	Camera Ports.....	3
4.3.	Installation Procedure	4
5.	Software Installation	5
6.	Using the Administrator Utility	10
6.1.	General Setting.....	11
6.1.1.	Configure Camera.....	12
7.	Installing the IP Camera Surveillance Software.....	15
7.1.	Using the IP camera surveillance software.....	17
7.2.	Configure the IP Surveillance Software	20
7.3.	General Settings	28
7.4.	Change Display Layout.....	33
7.5.	Scan function	36
7.6.	ZOOM and PTZ Controls.....	37
7.7.	Snapshot.....	38
7.8.	Recording	38
7.9.	Playback	39
8.	Web Connection and Setup	40
8.1.	Camera Setting.....	42
8.2.	LAN Setting.....	44
8.3.	E-Mail and FTP	47
8.4.	Motion Detection.....	49
8.5.	System.....	50
8.6.	Status.....	51
8.7.	Users	52
8.8.	Log.....	53
9.	Frequently Asked Questions	54
10.	Technical Specifications.....	55
11.	Appendix A Router/Gateway Setup for Internet Viewing	56
12.	Appendix B Set up WLAN step by step	57
13.	Appendix C Viewing via UPnP in Windows XP.....	63
14.	Appendix D Configure Windows 2003 Server.....	66

1. Introduction

Thank you for choosing the INTELLINET NETWORK SOLUTIONS NSC10 Network Camera. This NSC10 Network Camera sends live video through 10/100 Mbps wired network to a web browser or camera viewer across Internet anywhere in the world! This compact, self-contained unit lets you keep an eye on your home, your kids, and your workplace—whatever's important to you.

How does the Camera do all of this? Unlike standard "Web cams" that require an attached PC, the NSC10 Network Camera can connect directly to a network. The MJPEG video compression produces a high quality, high frame-rate, 640 x 480 video stream.

The included 16-channel Camera Viewer utility lets you record the video to your local hard drive, "live" or on a predetermined schedule. Use the instructions in this Guide to help you integrate the Camera into your network. These instructions should be all you need to get the most out of the NSC10 Network Camera.

2. Package Content

- One NSC10 Network Camera
- One Power Adapter
- One Camera Stand
- One Category 5 Ethernet Cable, 1 m
- One Quick Installation Guide
- One CD (Including Manual/Utility/Driver)

If any of the above items are missing, please contact your supplier.

3. System Requirement

System requirement for PC, MAC or Notebook PC to access the NSC10 Network Camera are:

- OS System: 2000, XP + SP2, Server 2003, Vista
- IE Version: 6.0.29 + SP2 or above
- CPU: Intel Pentium III 750MHz above or Intel Celeron 1GHz above
- Memory Size: 128MB (256MB recommended)
- DirectX 9.0 or above
- VGA card with fully DirectX 9.0 supported.
- VGA Card Resolution: 800 x 600 or above


4. Hardware Installation

4.1. LED and Focusing

The Camera head and its focus ring allow you to modify the aim and focus of the Camera. To adjust the Camera's focus, rotate the dark focus ring.

There are four LEDs indicating the camera status and networking status.


- **Power**
When the camera is power on, the LED will light.
- **LAN**
When the NSC10 Network Camera is linking to wired network, the LED is lighting. The LED is flashing when video is transmitted or received through wired network.

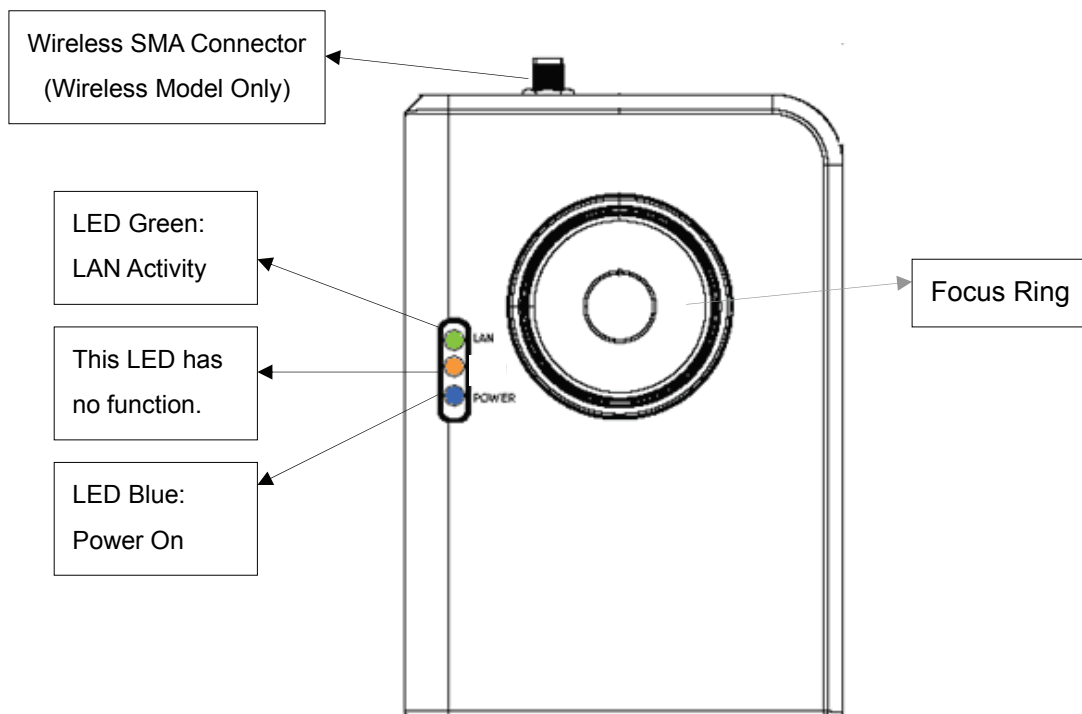

4.2. Camera Ports

The Camera features three ports and a Reset button.

- **Power**
The Power port is where you can connect the power adapter.
- **LAN**
The LAN port is where you can connect the Ethernet network cable.
- **WLAN (Antenna Connector)**
This round connection is standard Reverse SMA connector where any antennas with Reverse SMA connector can connect to the SOHO Network Camera..
- **Reset**
 1. If problems occur with your NSC10 Network Camera, press the reset button with a pencil tip (for less than 2 seconds) and the NSC10 Network Camera will re-boot itself, keeping your original configurations.
 2. If problems persist or you experience extreme problems or you forgot your password, press the reset button for longer than 5 seconds and the NSC10 Network Camera will reset itself to the factory default settings (warning: your original configurations will be replaced with the factory default settings).

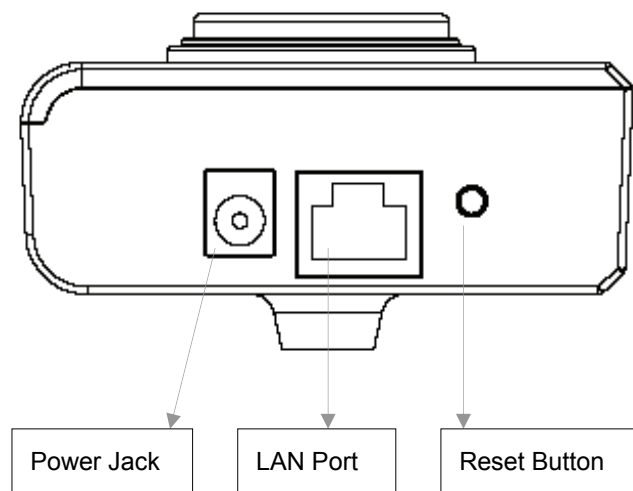

4.3. Installation Procedure


1. Unpack the NSC10 Network Camera package and verify that all the items listed in Chapter 2 are provided.
2. Connect the NSC10 Network Camera to your network by attaching the network cable from the switch/router to the UTP port of the NSC10 Network Camera.
3. Connect the power adapter to the NSC10 Network Camera and plug the power adapter in the power outlet. When the NSC10 Network Camera is ready, the Ready LED will light.
4. Make sure that you have installed the correct VGA driver and DirectX 9.0 or above.

Note: It is highly recommended that you use the power adapter shipped with the NSC10 Network Camera, do NOT use any other power adapter from any other sources.


5. Software Installation

Follow the simple steps below to run the Install Wizard to guide you quickly through the Installation process. The following installation is implemented in Windows XP. The installation procedures in Windows 2000/Server 2003 and Vista are similar.


1. Insert the CD shipped along with the NSC10 Network Camera into your CD-ROM drive. The “Autorun.exe” program should be executed automatically. If not, run “Autorun.exe” manually from “Autorun” folder in the CD.
2. The Install Wizard will show four selections. Select the program you want to install or click “Exit” to install the program later. Select “Install Administrator Utility”.

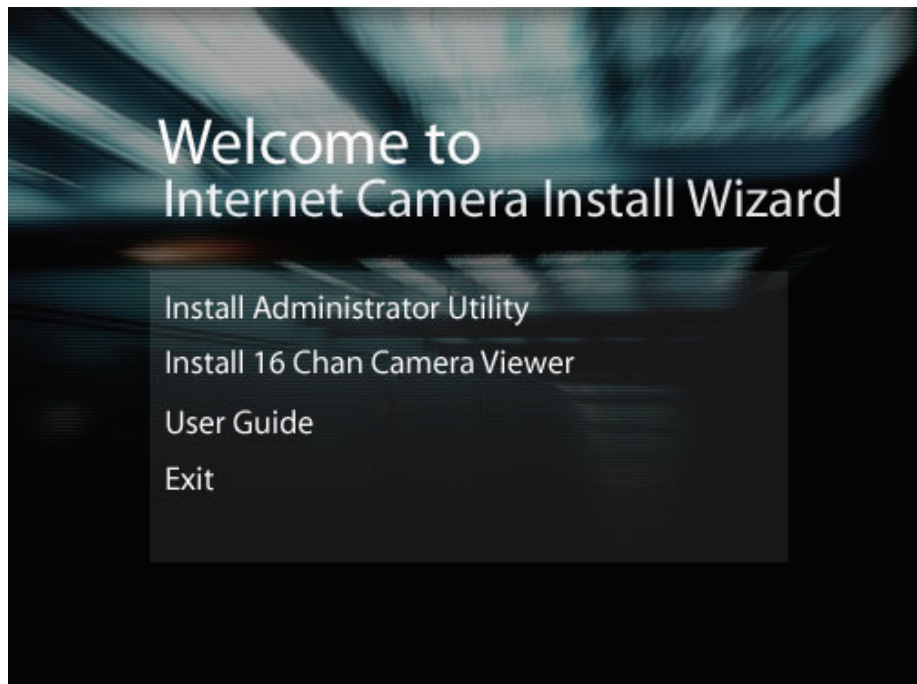


3. The system will start the installation procedures. Click “Next” to continue installation.

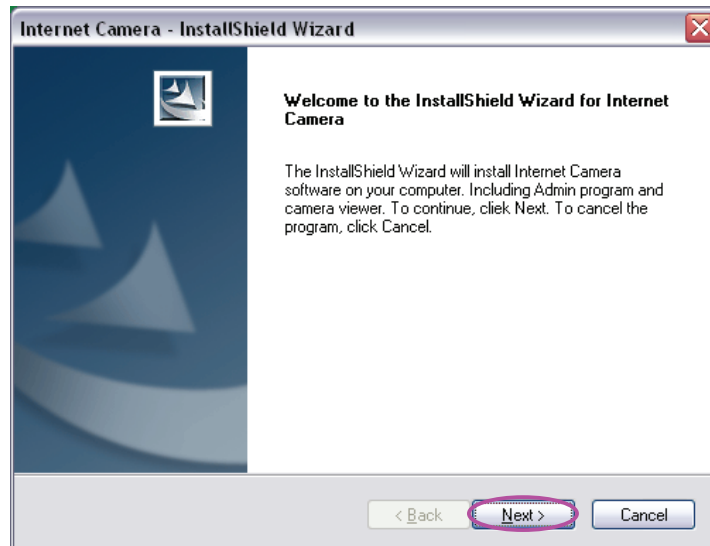


4. If you wish to install the software program in an alternate location, click “Change”; otherwise click “Next” to move on to the next step.

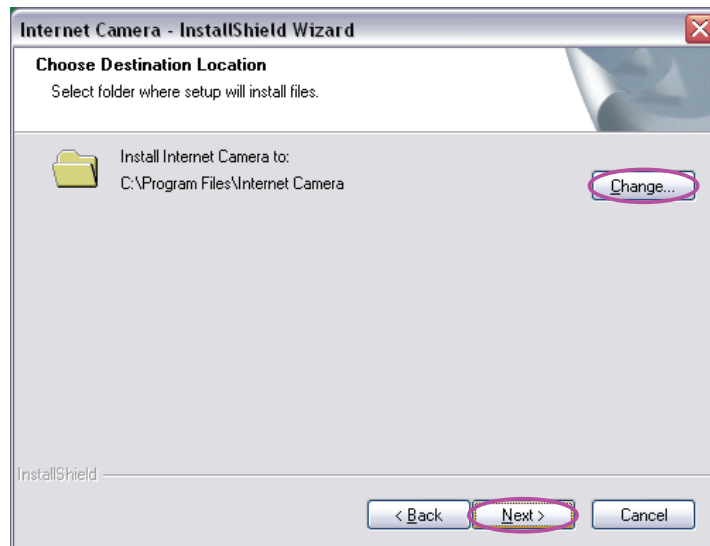


5. Click "Install" to start installing the program.

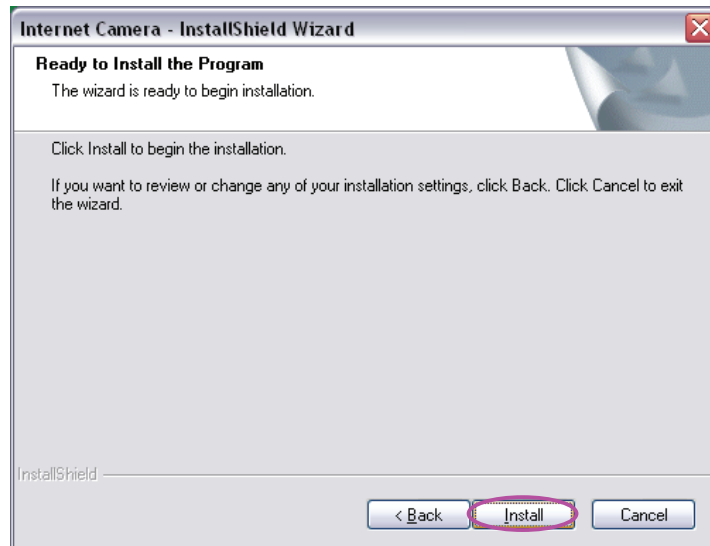


6. The system will install the program automatically.

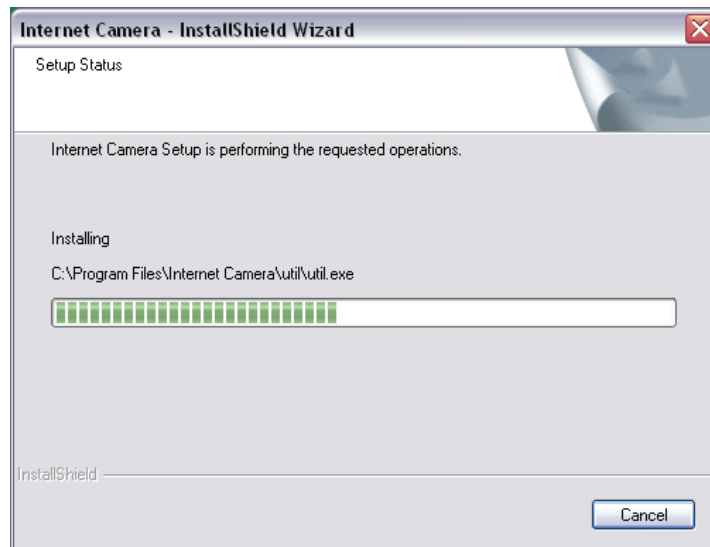


7. Click "Finish" to complete the software installation.

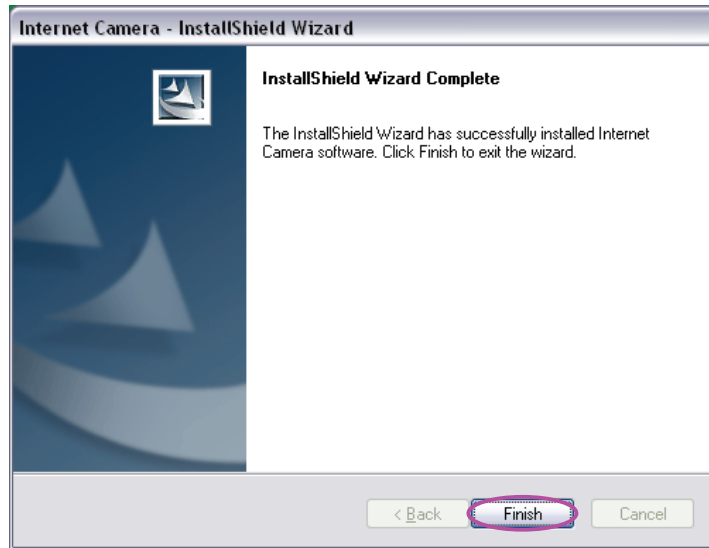


8. The "Administrator Utility" starts automatically after the installation has finished. The utility lists all NSC10 Network Cameras found on the network. Choose the one you want to configure and click on the tools symbol (see circle below) to proceed.

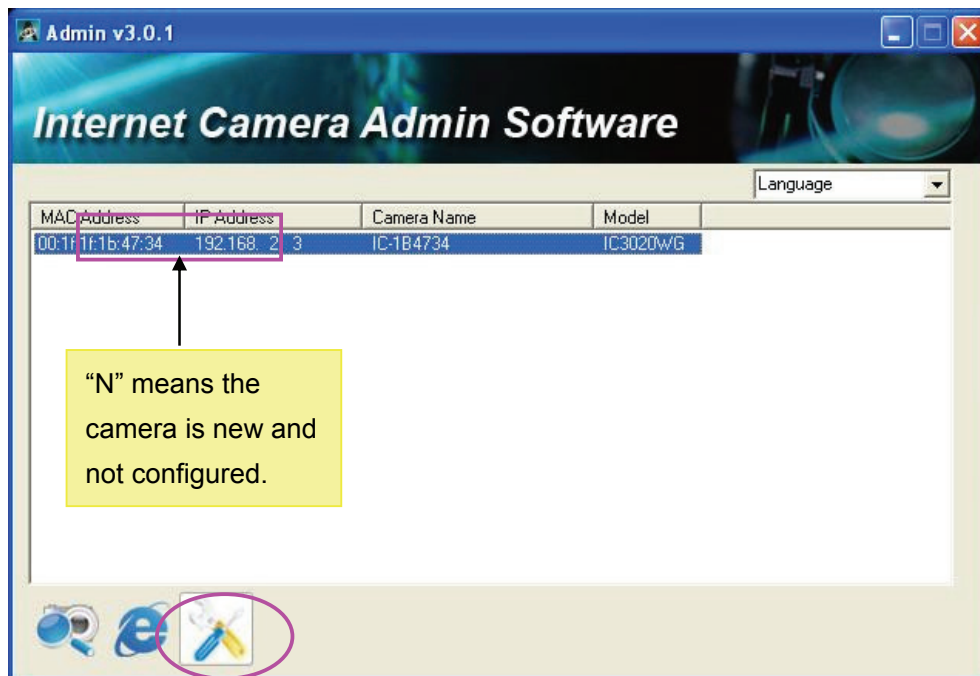

9. Please enter the default password “1234” and click “OK” to login to the IP setup page.

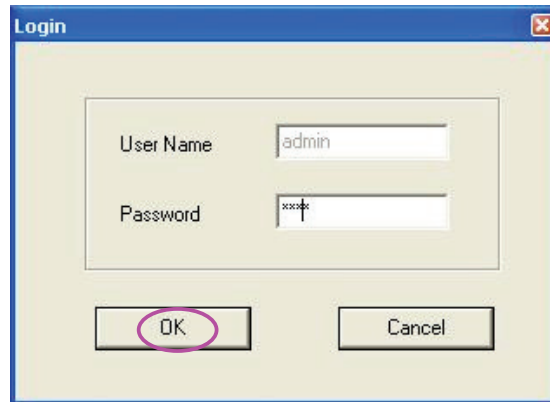

10. NSC10 Network Camera is working through the network (TCP/IP Protocol). The IP address and subnet mask setting must be correct, or you cannot access to the camera. The wizard program will detect the IP address status of your network automatically and suggest a free IP address for the Camera. You can accept the suggested value or, if you have an understanding about IP networks, IP addresses and network masks, enter the value manually. Click “Finish” to apply the configuration.

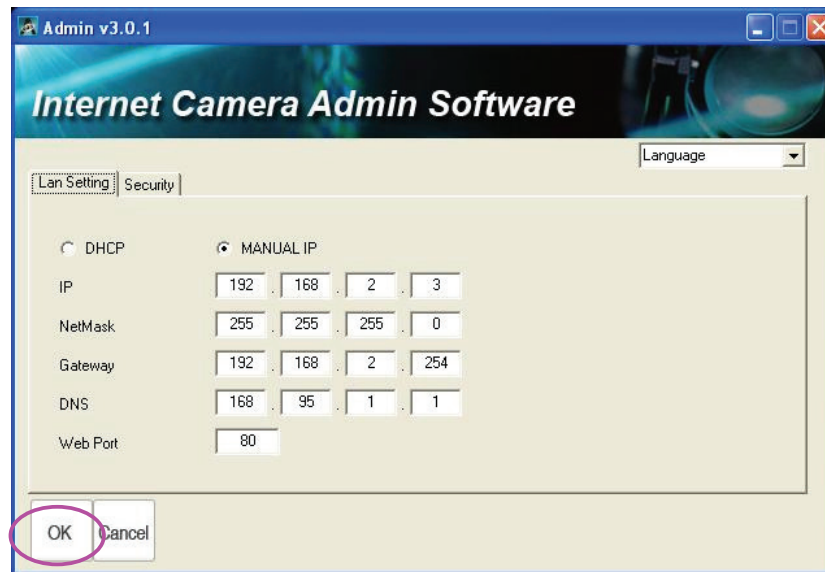


11. The following two chapters go into more details about the configuration and setup of the cameras. Chapter 6 explains the Administrator Utility and chapter 7 deals with the installation and configuration of the 16-channel IP Camera Viewer.

6. Using the Administrator Utility

The Administrator Utility allows users to search and setup the cameras located within the Intranet or on the Internet. From the utility, users can view all the information of the selected camera; furthermore, it provides a setting wizard, which can guide users to add the camera to the network easily and promptly.


There are two ways to run the Administrator Utility as follows.

1. Click “Start”, select “Programs\IP Camera\Admin Utility” to run the utility.

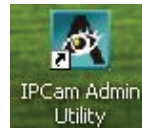


2. Double click the “IP Camera Admin” icon to run the utility.

Once the utility is started, it searches for all the cameras in the network and displays them. You can then perform configuration tasks which are explained on the following pages.

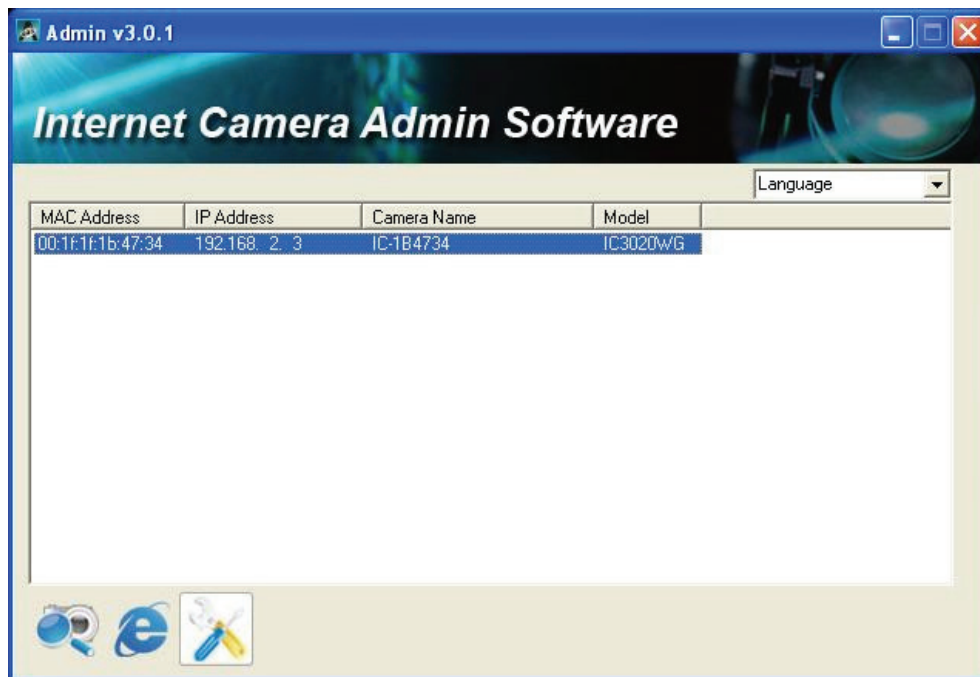

6.1. General Setting

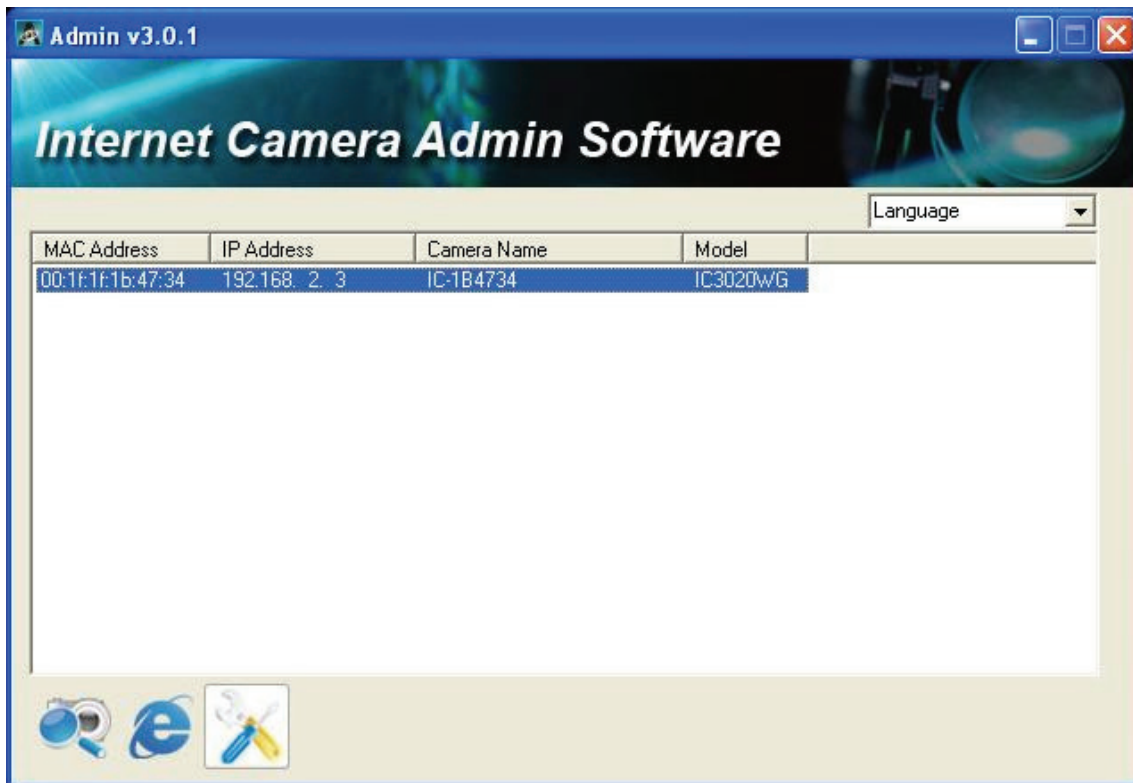

Information of Camera

Camera Information It displays all information of the selected camera. The information includes the MAC address, IP Address, Camera Name and Model.

Task Bar

Search Camera Click "Search Camera" to search for cameras on the network.

Browse Camera via Web Click "Browse Camera via Web" to open the Web browser and auto-connect to the NSC10 Network Camera/

Configure Camera Click "configure camera" to change the IP settings, user name and password of the selected camera.

Languages



Language This utility supports English, Japanese and Chinese. You can select the language here.

6.1.1. Configure Camera

When you click the “Configure Camera” button (see below), a screen will pop-up. Enter a valid “User Name” and “Password”.

The default values are: User Name: “**admin**”

Password: “**1234**”

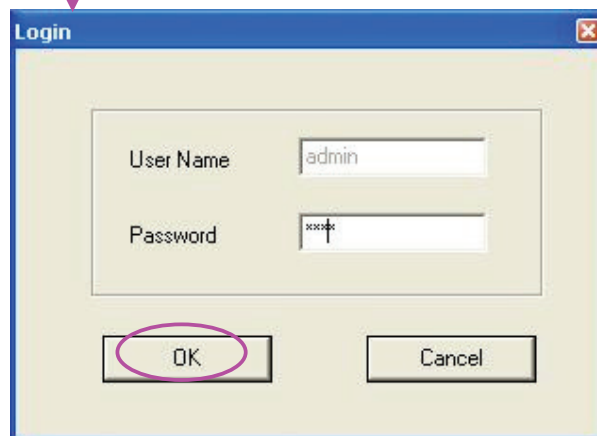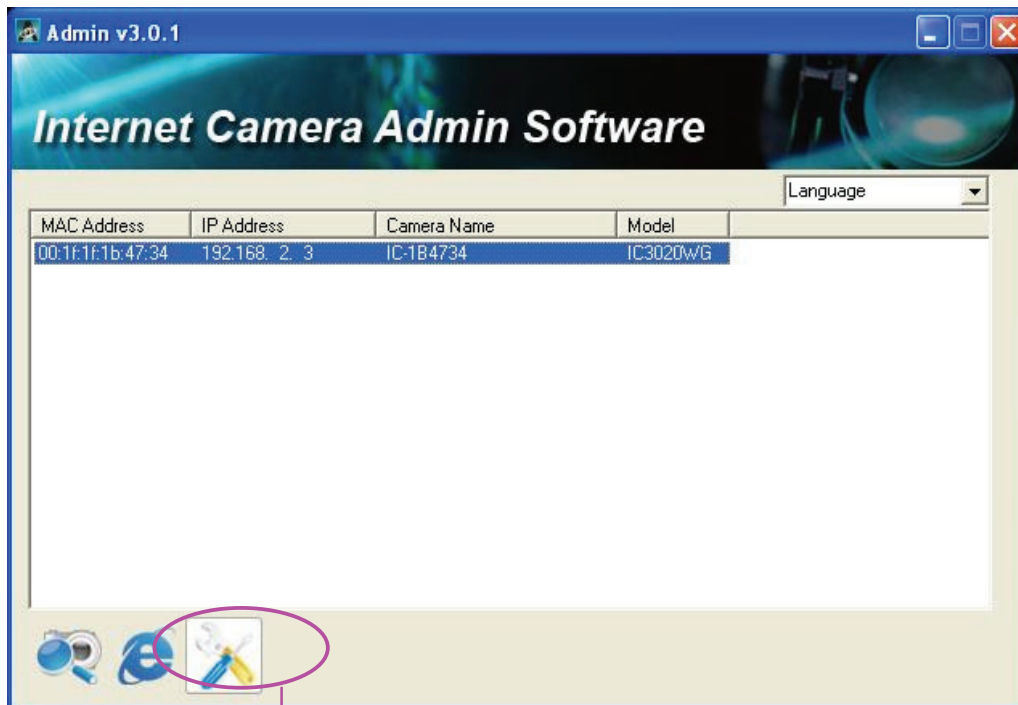

Click "OK" to begin with the configuration.

LAN Setting

Admin v3.0.1

Internet Camera Admin Software

Language

Lan Setting | Security

DHCP MANUAL IP

IP: 192 . 168 . 2 . 3

NetMask: 255 . 255 . 255 . 0

Gateway: 192 . 168 . 2 . 254

DNS: 168 . 95 . 1 . 1

Web Port: 80

OK Cancel


LAN Setting

- IP Address** Enter an unused IP address within the IP address range used on your LAN. If you don't know the IP address range, or don't have knowledge about TCP/IP networks, it is recommended to activate "DHCP" instead. With "DHCP" enabled the camera will obtain proper IP information from the router in your network.
- NetMask** The Subnet Mask field must match the subnet setting on your LAN. A common example would be 255.255.255.0.
- Gateway** The Gateway IP address must be the same, which the PCs on your LAN use. Typically this is the IP address of the router in your network. For example, if you know the router in your network operates on IP address 192.168.1.254, then you can be reasonably certain, that 192.168.1.254 is the correct value for this field. If you don't know what a Gateway IP address is, or you don't know how to look it up, don't worry. If you enable "DHCP", you won't need to enter this value.

DNS Server DNS Servers (Domain Name Servers) translate Internet domain names such as www.google.com to IP addresses such as 64.233.187.99. A valid DNS entry is required here. You can enter the DNS Server provided by your ISP, you can also enter the IP address of your router in most cases. If you enable "DHCP" you won't need to worry about this value.

Web Port This Camera supports web connections. The default web port is 80. You can use a different port for the camera, for example if port 80 is already in use by another service like a Web service. If you change the web port from 80 to 8080, you must type <http://192.168.2.3:8080> to connect to the camera with the Web browser.

Security

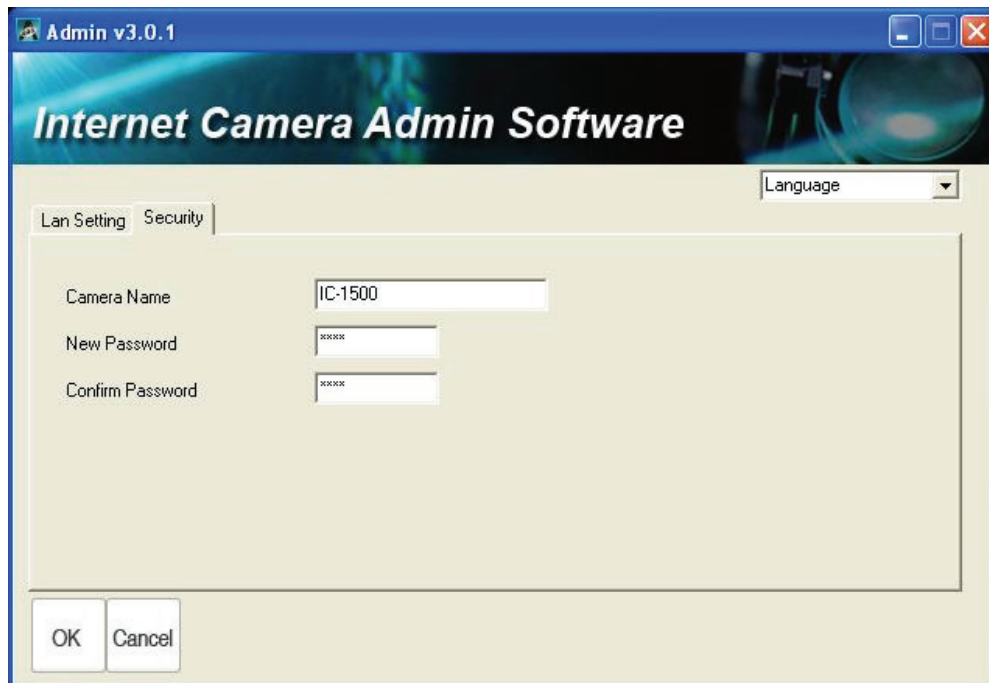

The screenshot shows a window titled "Admin v3.0.1" with the subtitle "Internet Camera Admin Software". The window has a "Language" dropdown menu in the top right corner. Below the title bar, there are two tabs: "Lan Setting" and "Security", with "Security" being the active tab. The main content area contains three input fields: "Camera Name" with the value "IC-1500", "New Password" with "xxxx", and "Confirm Password" with "xxxx". At the bottom left, there are "OK" and "Cancel" buttons.

Security


Camera Name You can specify a name for your camera here, e.g., "Entrance".

New Password Enter the new password you want to use for the camera.


Confirm Password Retype the new password to confirm the setting.

7. Installing the IP Camera Surveillance Software


1. Double-click the setup file located on the supplied CD-ROM. When the following window appears, click "Next."

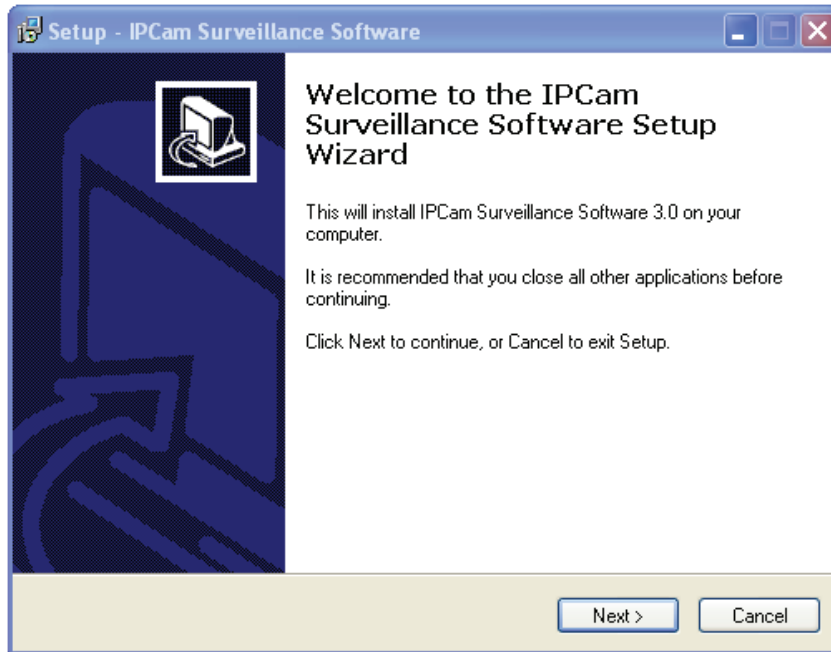


2. You can specify the destination folder of the software installation or you can just use the default folder, and click "Next" to continue.

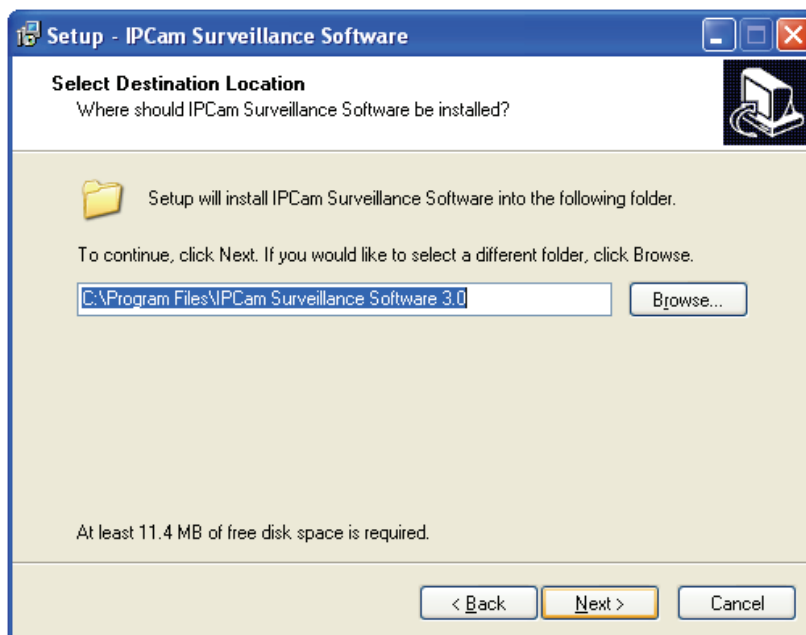

3. If you want the installation program to create a desktop icon or a quick launch icon for you, select the desired items and click "Next" to continue.

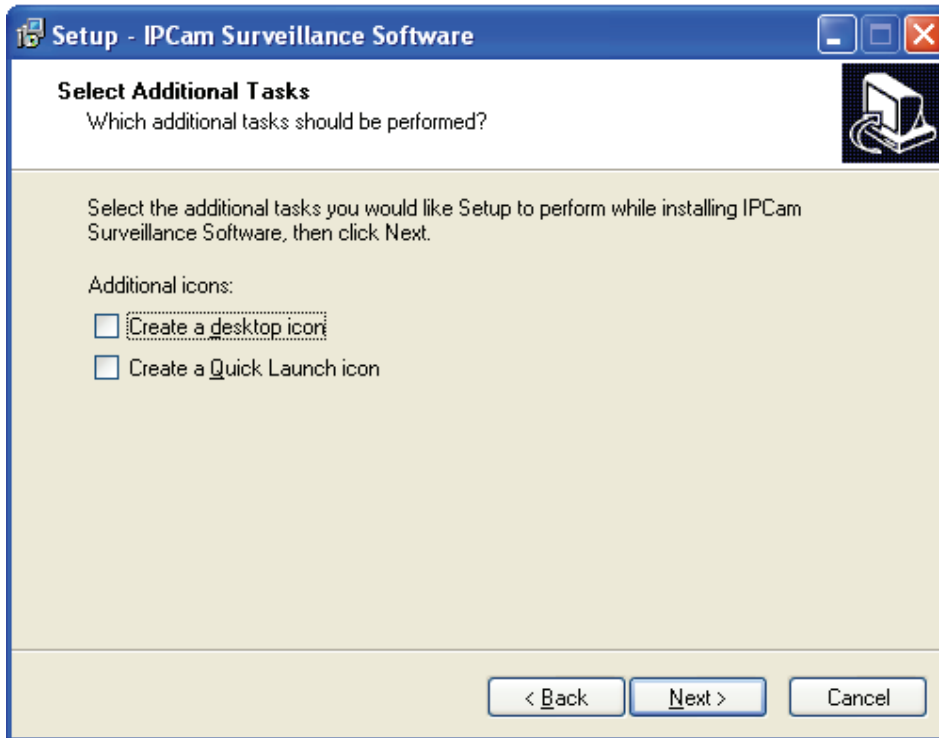

4. The next screen presents a summary of the installation options. Click "Install" to begin the installation process.

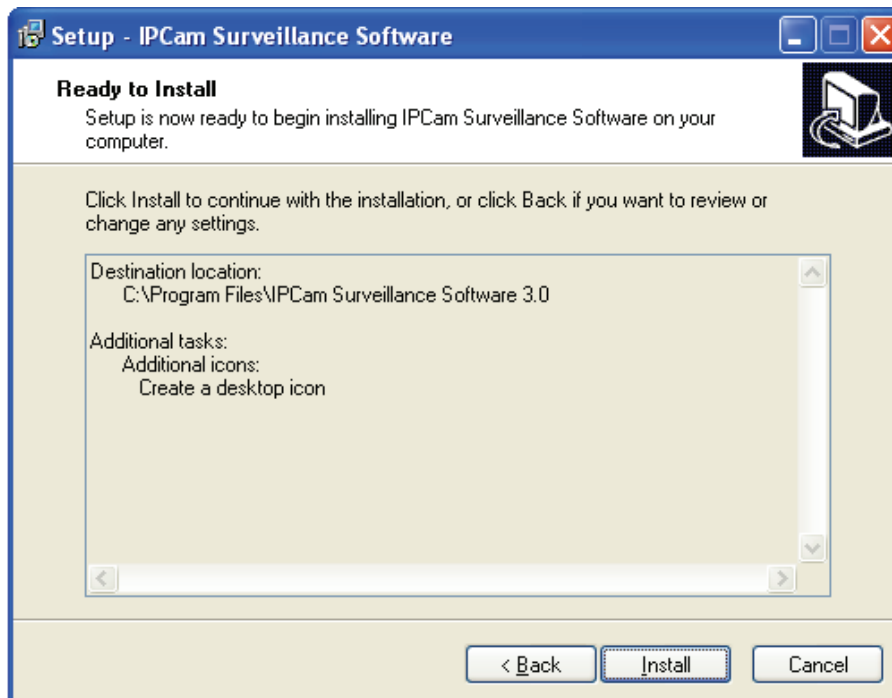

5. After the installation has finished, the following screen appears:



Click "Finish" to complete the installation.


7.1. Using the IP camera surveillance software

You can click the "IPCam Surveillance Software" icon from the desktop, quick launch bar, or start menu to start the IP camera surveillance software.


Before you start:





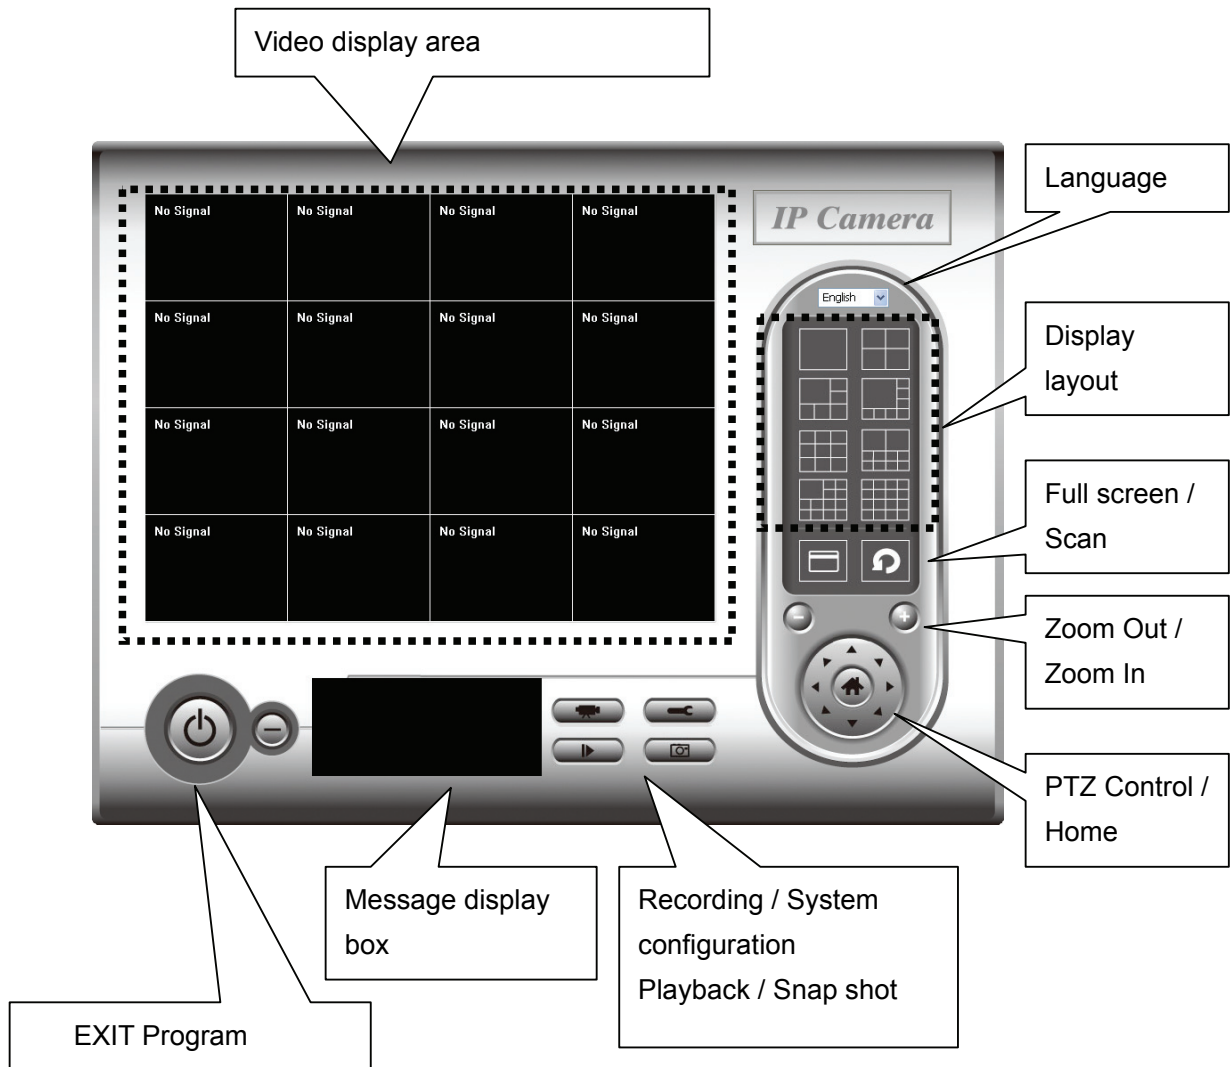









IP camera surveillance software will only work when your monitor's resolution is "1024 x 768". Change the resolution before you use IP camera surveillance software, or it won't start.

Here are descriptions for all components of the IP camera surveillance software:



Below is a description of the buttons and their functions.


Item	Description
Video display area	The image of all connected cameras will be displayed here.
Language	Select a language from this dropdown menu to change the display language.
Display layout 	There are eight kinds of available display layouts. Click a layout icon to change camera display layout.
Full screen	Click this button to switch to full screen mode and press


	"ESC" key to return to the normal mode.
Scan 	Click this button once to activate scan function (scan icon will become blue ); click again to stop scanning (scan icon will become white ).
Zoom out 	Zoom-out This function is only available for supported cameras. The NSC10 Network Camera does not support this function.
Zoom In 	Zoom-in This function is only available for supported cameras. The NSC10 Network Camera does not support this function.
PTZ control 	The PTZ function is only available for supported cameras. The NSC10 Network Camera does not support this function.
Home 	Click this button to return the camera to "Home" (default) position. This function is only available for supported cameras.
Recording 	Start video recording.
Configure 	Software / camera configuration.
Playback 	Play back a recorded video file.
Snapshot 	Take a snapshot of the current camera image.
Message display	Displays all system messages ("camera is disconnected". etc.).
EXIT 	Terminates the IP camera surveillance software.
Minimize window 	Minimizes the IP camera surveillance software window.

Video display area	Displays the image of all cameras by the display layout you have selected.
--------------------	--

7.2. Configure the IP Surveillance Software

1. Configure cameras

Before you use this IP camera surveillance software, you must configure the camera(s) you wish to connect. Click the "System configure" button  and a popup menu will appear:




Select 'Configure Cameras':

Note: If you're prompted by a windows security alert which asks you if you want to block "IPCamViewer" program, click "Unblock". Failure to do so may result in the IP camera surveillance software not functioning correctly.



2. Camera tab

On this tab you can configure all cameras you wish to connect. Up to 16 cameras can be connected simultaneously:

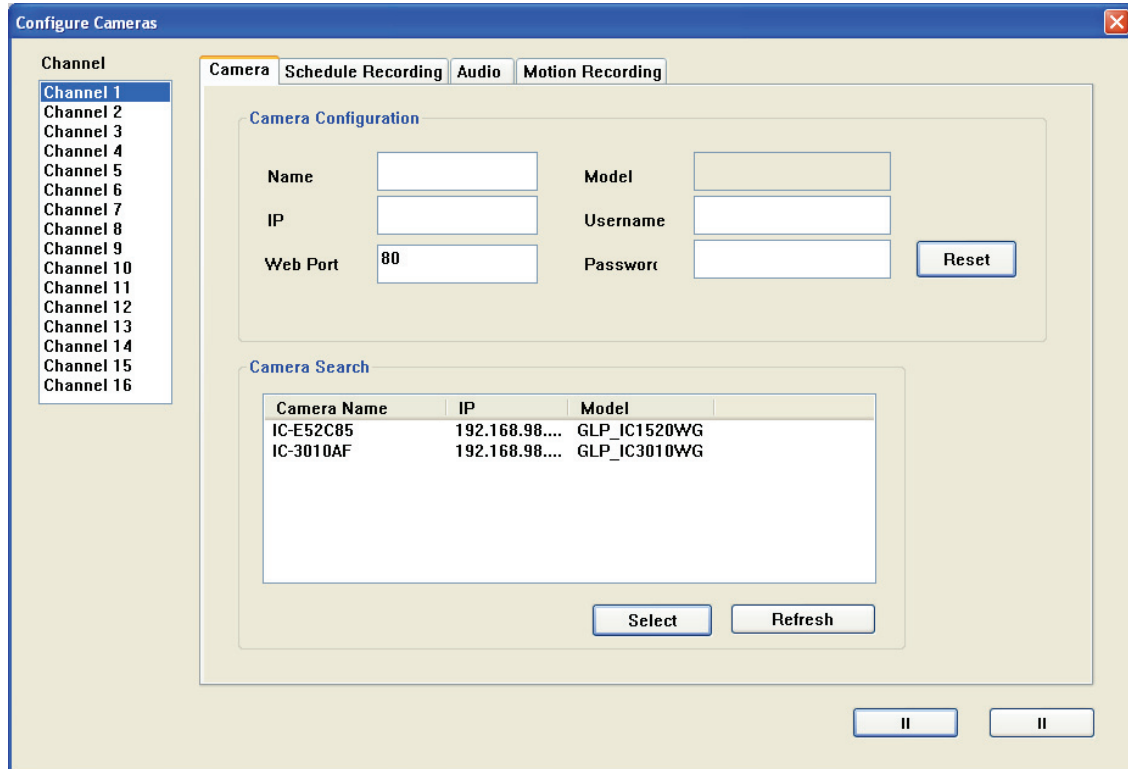

Here are the descriptions of all setting items:

Item	Description
Channel	Select the channel number you wish to set.
Camera Search	All cameras found on your local network will be displayed in the "Camera Search" box.
Select	Select a camera listed in the "Camera Search" box, and click 'Select' to fill all parameters of the selected camera in every camera configuration fields.
Refresh	Rescan all cameras on your local network. This function updates the list and always shows the current cameras found on your network.
Name*	Input the name of the camera here. Default value is the first 6 bytes of the camera's MAC address. You can change the name of the camera so you can remember the camera's location or purpose easily.
Model	Displays the model of the selected camera. This field can not be changed.
IP*	Input the IP address of the camera.
Username*	Input the user name of the camera.
Web Port*	Input the Web port of the camera. By default it's "80".
Password	Input the password of the camera. Default value is '1234'.
Video Format**	Select the video encoding format of this camera: Select "MJPEG", not "MPEG4".
Reset	Clear all fields in 'Camera Configuration' section.
OK	Save settings in this tab.
Cancel	Discard all settings in this tab.

* It's recommended to use the "Select" button to fill the content of this field.


** Only available for cameras that support this function.

After you've set all channels you wish to set, click "OK" to save the settings. If everything's correct, you'll see the camera's image in the IP camera surveillance software's main menu:



3. Schedule Recording tab

On this tab, you can set up a scheduled video recording, so you can record the video captured by all cameras you have by a pre-defined schedule.

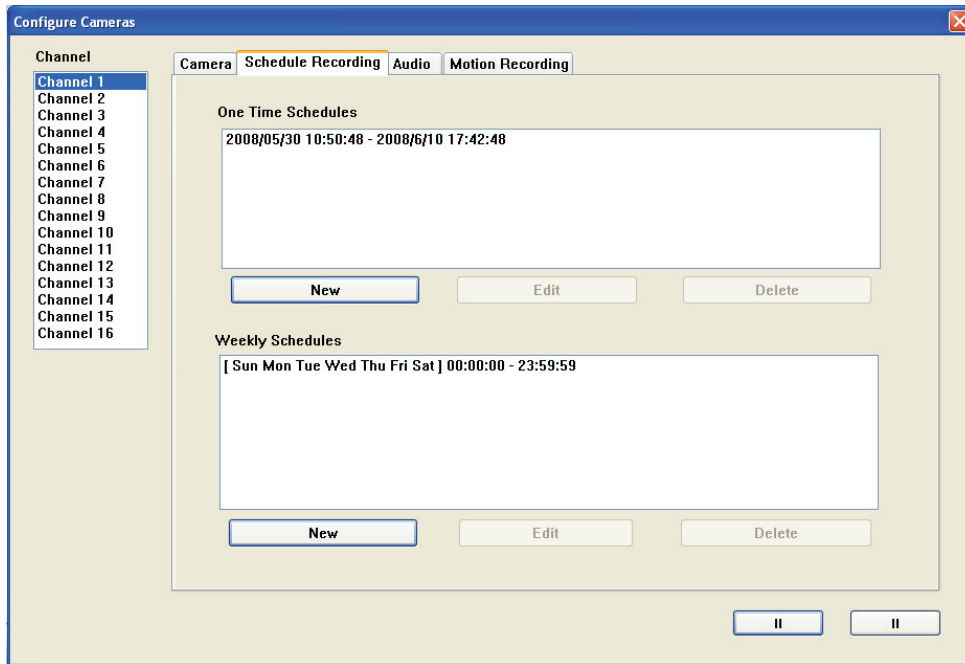

Find a description of all options on the next page:

Item	Description
Channel	Select the channel number you wish to set.
One Time Schedule	You can specify the one-time schedule for a selected camera; this schedule will be executed once only.
<p data-bbox="305 384 435 489">New (One Time Schedule)</p>	<p data-bbox="605 384 1179 411">Click this button and a new window will appear:</p> <div data-bbox="527 472 1255 936" data-label="Image"> </div> <p data-bbox="527 974 1255 1066">Specify the time duration of this one-time schedule (the date and time of "From" and "To"), then click "OK" to save the settings.</p>
Edit	You can modify a scheduled recording item. Select a schedule in "One Time Schedules" list, and click the "Edit" button to edit the start and end time of this schedule.
Delete	Delete a selected schedule item.
<p data-bbox="305 1266 435 1371">New (Weekly Schedule)</p>	<p data-bbox="605 1266 1179 1293">Click this button and a new window will appear:</p> <div data-bbox="519 1354 1263 1761" data-label="Image"> </div>

	<p>You can define a recording schedule that will be executed at the specified time of certain weekday(s) in a week. Check all weekdays that apply, and set the start time in the "From" field. You can set the duration of the video recording in the "Period" field (format is HH:MM:SS), and the end time will be calculated automatically and displayed in the "To" field. You can also click "All Time Record" to define a recording schedule that will be executed every weekday, from 12:00:00AM to 11:59:59PM.</p> <p>Click "OK" to save changes.</p>
Edit	You can modify a scheduled recording item. Select a schedule in the "One Time Schedules" list, and click "Edit" button to edit the start and end time of this schedule.
Delete	Delete a selected schedule item.
OK	Save settings on this tab.
Cancel	Discard all settings on this tab.

4. Audio tab


This menu has no function, as the 503792 SOHO Network Camera does not support audio.

5. Motion Recording tab

With this function activated, only motion captured by the camera will be recorded, so you don't have to waste hard disk storage space on images you don't need to pay attention to.

WARNING:

This function should not be used to secure high-value items. Good-quality alarm sensors, e.g., IR based, will provide more reliable results.

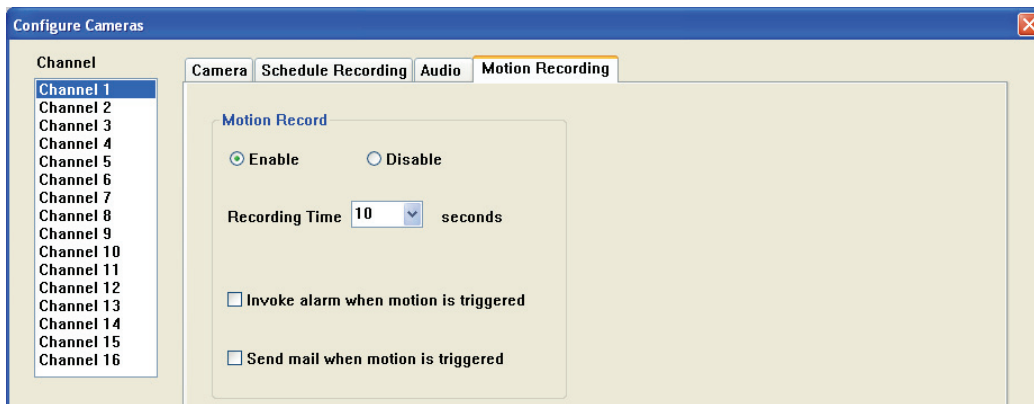


Below are the descriptions of the setup options:

Item	Description
Channel	Select the channel number you wish to set.
Enable	Enable the motion record function.
Disable	Disable the motion record function.
Recording Time	Select the time duration that the camera will record when a motion has been detected from the dropdown menu in seconds.
Invoke alarm when motion is triggered	Send an alarm when a motion has been detected by the camera.
Send mail when motion is triggered	Send an email to a pre-defined address when a motion has been detected by the camera.
OK	Save settings on this tab.
Cancel	Discard all settings on this tab.

7.3. General Settings

This menu gives you access to important settings of the 16-channel viewer.


1. General tab

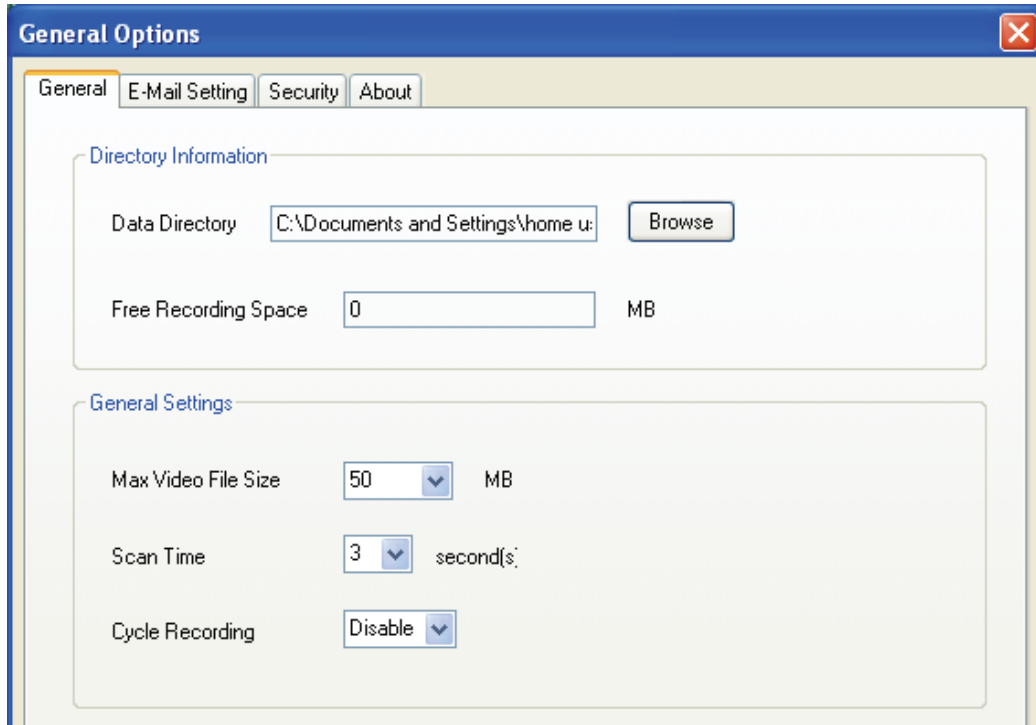

Item	Description
Data Directory	Set the directory (folder) you wish to store the recorded video and captured image. Click "Browse" to select a directory.
Free Recording Space	Displays the remaining storage space on the drive where the data directory is located.
Max Video File Size	Defines the maximum file size of a video file. The example shows 50 MB, which means that the camera viewer will create AVI videos in chunks of 50 MB.
Scan Time	Define the time period to pause between every camera switch when you activate "Scan" function.
Cycle Recording	You can decide the behavior when hard disk space is full: Disable: Do not overwrite recorded video files. Enable: Overwrite recorded video files.
OK	Save settings on this tab.
Cancel	Discard all settings on this tab.

2. E-Mail Setting tab

If you want to use the motion detection function and wish to get an e-mail that contains the image captured by the camera, set up your e-mail-related parameters here first.

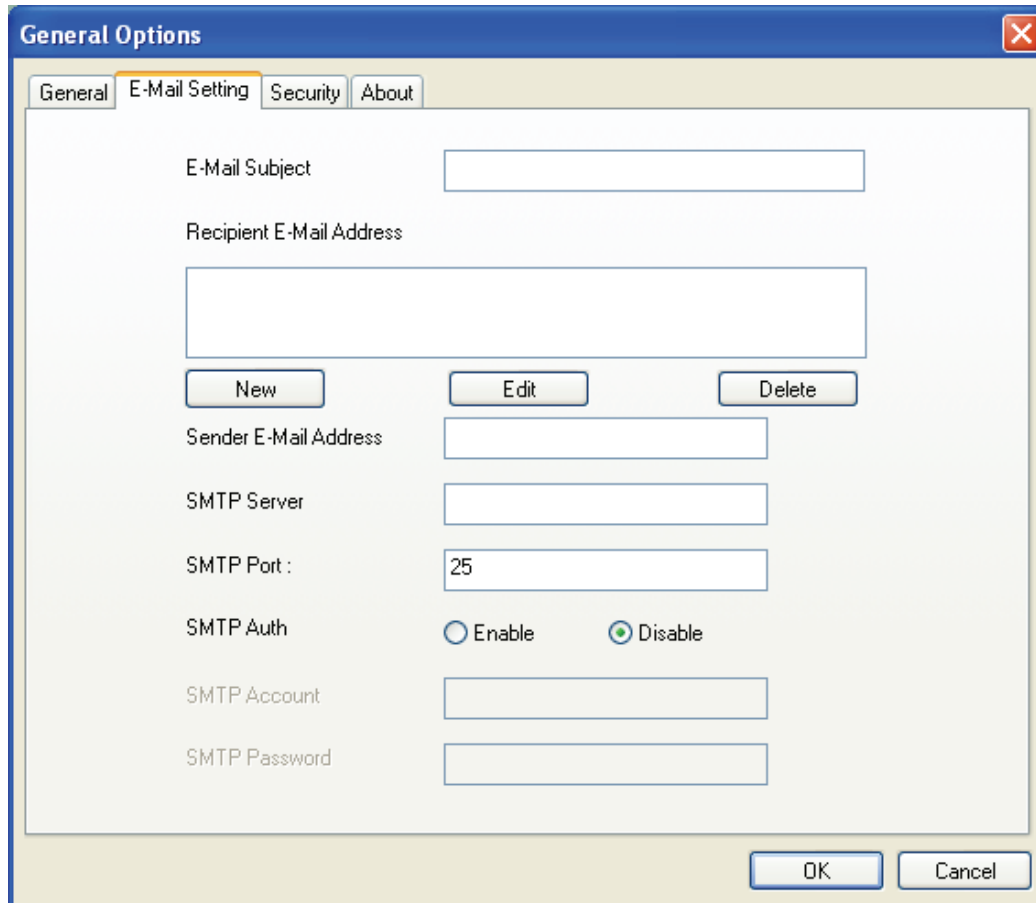


The image shows a screenshot of a software dialog box titled "General Options". The dialog has a blue title bar with a close button (X) in the top right corner. Below the title bar, there are four tabs: "General", "E-Mail Setting", "Security", and "About". The "E-Mail Setting" tab is currently selected and highlighted. The main area of the dialog contains several input fields and controls:

- E-Mail Subject:** A text input field.
- Recipient E-Mail Address:** A larger text input field.
- Buttons:** Three buttons labeled "New", "Edit", and "Delete" are positioned below the recipient address field.
- Sender E-Mail Address:** A text input field.
- SMTP Server:** A text input field.
- SMTP Port:** A text input field containing the number "25".
- SMTP Auth:** Two radio buttons labeled "Enable" and "Disable". The "Disable" radio button is selected.
- SMTP Account:** A text input field.
- SMTP Password:** A text input field.



At the bottom right of the dialog, there are two buttons: "OK" and "Cancel".

Find explanations about the options on the next page.

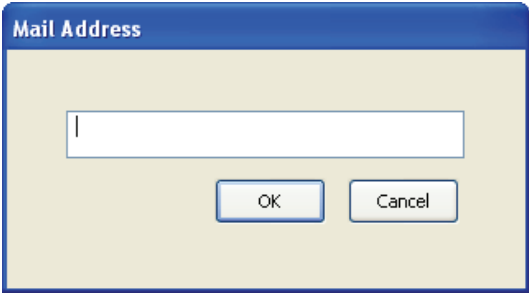Item	Description
E-Mail Subject	Specify the subject of the e-mail.
Recipient E-Mail Address	All e-mail addresses you set.
New	<p>Click this button and you'll be prompted to input the e-mail address. Click "OK" to save changes.</p> 
Edit	Select an e-mail address from "Recipient E-Mail Address" box, and click "Edit" to edit the email address.
Delete	Delete the selected e-mail address.
Sender E-Mail Address	Specify the e-mail address of e-mail sender.
SMTP Server	Specify the IP address or host name of the SMTP server you wish to use. ISPs will only allow subscribers to use their SMTP server. If you don't know which SMTP server you should use, refer to the setting of your e-mail software or ask your ISP / network administrator.
SMTP port	Specify the port number of the SMTP server you wish to use. By default (and the setting of most of SMTP servers) it's '25'.
SMTP Auth	Select "Enable" if your SMTP server requires authentication, select "Disable" if it's not required. If you don't know if your SMTP server requires authentication, refer to the setting of your e-mail software or ask your ISP / network administrator.
SMTP Account	Input the SMTP account (username) of your SMTP server here. In most cases, it's the same as your POP3 username (the one you use to receive email). Refer to the setting of your e-mail software or ask your ISP / network administrator if you're not sure about this.
SMTP Password	Input the SMTP password of your SMTP server. In most cases, it's the same as your POP3 password (the one you use to receive email). Refer to the setting of your e-mail software or ask your ISP / network administrator if you're not sure about this.
OK	Save the settings on this tab.
Cancel	Discard all settings on this tab.


3. Security tab

If you don't want other people to access the NSC10 Network Camera surveillance software, you can set a password to protect it. You'll need to input the password every time you wish to use this IP camera surveillance software. The image below shows the password request window.

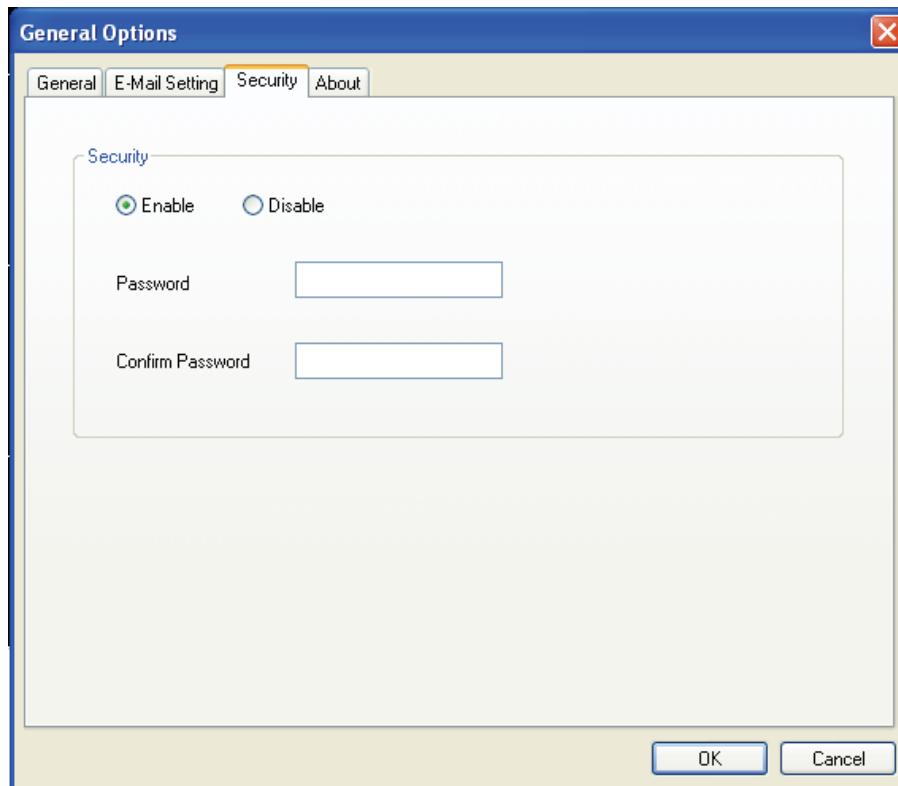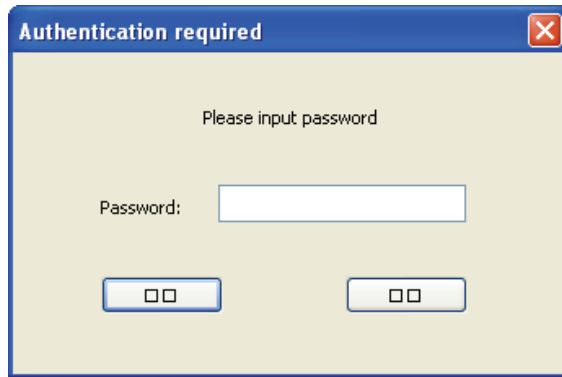

Enable or disable the password authentication and type in the password (re-enter it to confirm it) and click "OK."


4. About tab

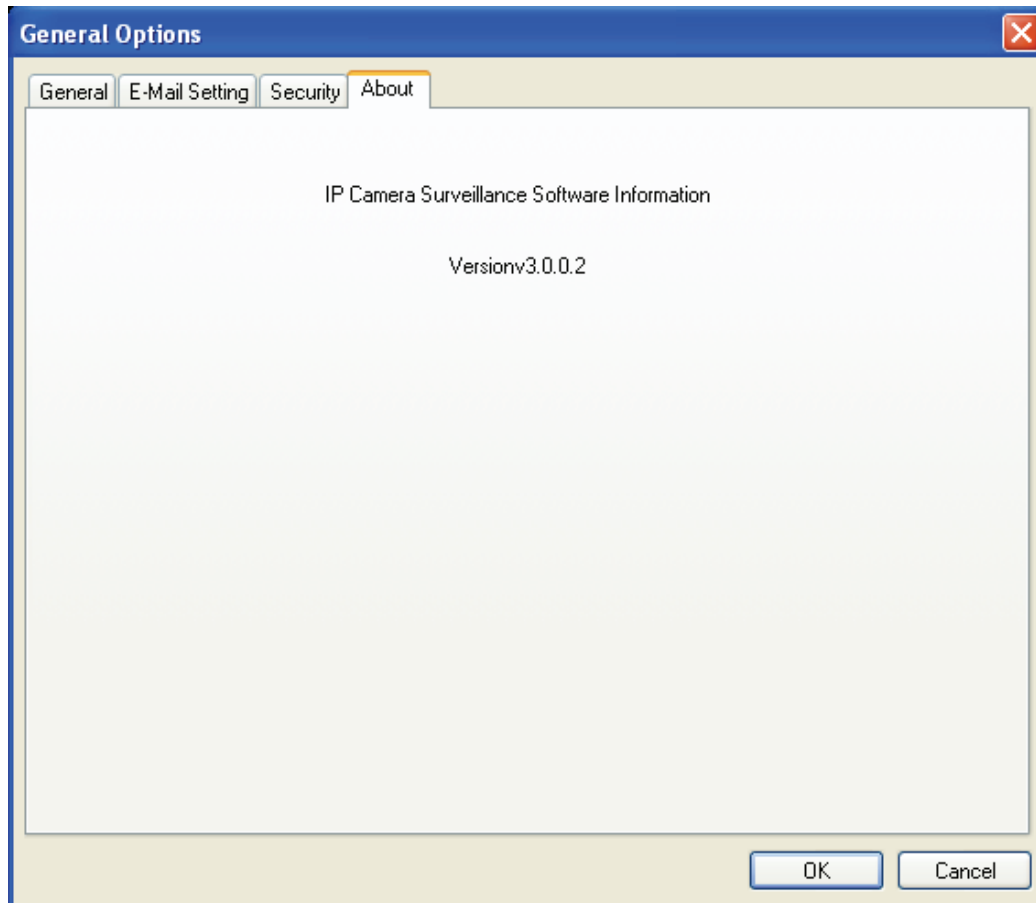

The software version is shown here. Be sure to write down the number and have it handy before contacting the technical support team.


7.4. Change Display Layout

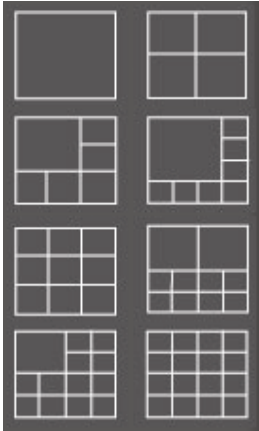


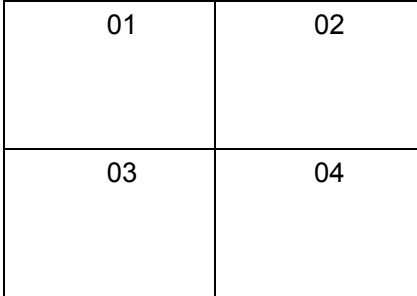

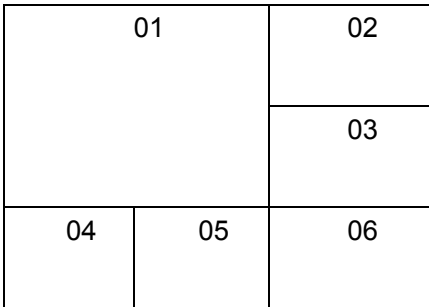

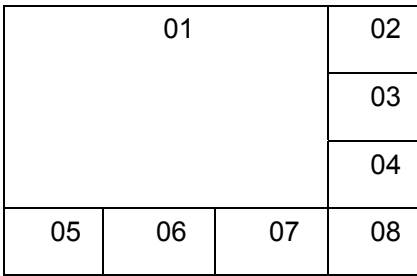
This IP camera surveillance software provides eight different layout styles. They are selectable via the control panel shown below:




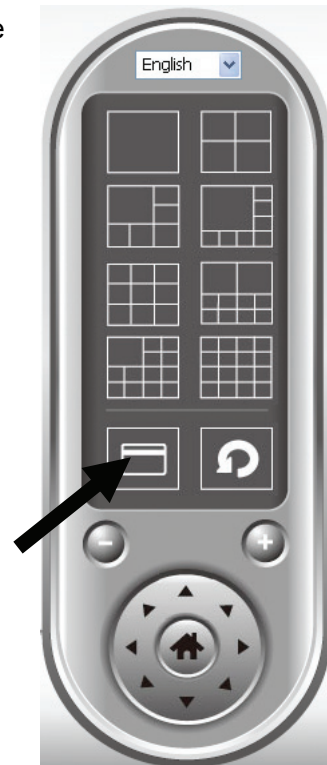


Each of the designs displays a different amount of cameras. In order to get a full-screen view of a camera, click on the button as indicated below.

Find more detailed explanations about the different layouts on the next two pages.



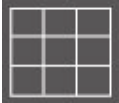

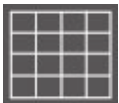
<p>Layout style 1: 1 Camera only</p> 	<p>Displays the video of 1 camera only.</p> 
<p>Layout style 2: 4 Cameras</p> 	<p>Displays the video of up to 4 cameras.</p> 
<p>Layout style 3: 6 Cameras</p> 	<p>Displays the video of up to 6 cameras.</p> 
<p>Layout style 4: 8 Cameras</p> 	<p>Displays the video of up to 8 cameras.</p> 

<p>Layout style 5: 9 Cameras</p> 	<p>Displays the video of up to 16 cameras.</p> <table border="1" data-bbox="677 279 1089 579"> <tr> <td>01</td> <td>02</td> <td>03</td> </tr> <tr> <td>04</td> <td>05</td> <td>06</td> </tr> <tr> <td>07</td> <td>08</td> <td>09</td> </tr> </table>	01	02	03	04	05	06	07	08	09							
01	02	03															
04	05	06															
07	08	09															
<p>Layout style 6: 10 Cameras</p> 	<p>Displays the video of up to 10 cameras.</p> <table border="1" data-bbox="677 686 1089 1022"> <tr> <td colspan="2">01</td> <td colspan="2">02</td> </tr> <tr> <td>03</td> <td>04</td> <td>05</td> <td>06</td> </tr> <tr> <td>07</td> <td>08</td> <td>09</td> <td>10</td> </tr> </table>	01		02		03	04	05	06	07	08	09	10				
01		02															
03	04	05	06														
07	08	09	10														
<p>Layout style 7: 13 Cameras</p> 	<p>Displays the video of up to 13 cameras.</p> <table border="1" data-bbox="677 1176 1089 1442"> <tr> <td colspan="2" rowspan="2">01</td> <td>02</td> <td>03</td> </tr> <tr> <td>04</td> <td>05</td> </tr> <tr> <td>06</td> <td>07</td> <td>08</td> <td>09</td> </tr> <tr> <td>10</td> <td>11</td> <td>12</td> <td>13</td> </tr> </table>	01		02	03	04	05	06	07	08	09	10	11	12	13		
01				02	03												
		04	05														
06	07	08	09														
10	11	12	13														
<p>Layout style 8: 16 Cameras</p> 	<p>Displays the video of up to 16 cameras.</p> <table border="1" data-bbox="677 1593 1089 1862"> <tr> <td>01</td> <td>02</td> <td>03</td> <td>04</td> </tr> <tr> <td>05</td> <td>06</td> <td>07</td> <td>08</td> </tr> <tr> <td>09</td> <td>10</td> <td>11</td> <td>12</td> </tr> <tr> <td>13</td> <td>14</td> <td>15</td> <td>16</td> </tr> </table>	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16
01	02	03	04														
05	06	07	08														
09	10	11	12														
13	14	15	16														

7.5. Scan function


With this function you can periodically switch between the cameras that are set up in the software. The scan interval is defined in the general options.

Click the scan button once to activate the scan function (the scan icon will become blue ); click it again to stop the scan (the scan icon will become white .

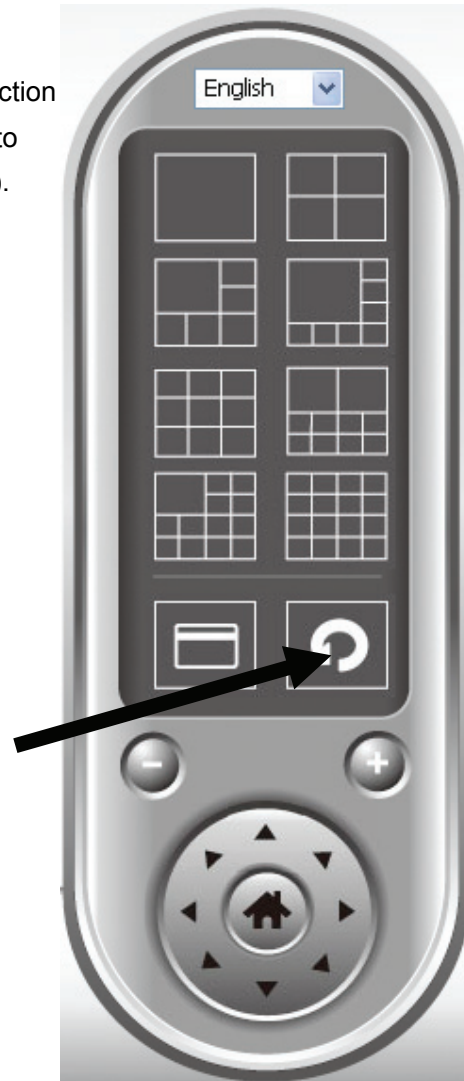


7.6. ZOOM and PTZ Controls

These functions are not supported by the NSC10 Network Camera Model 503792. Don't be surprised if nothing happens when you click on any of these buttons.

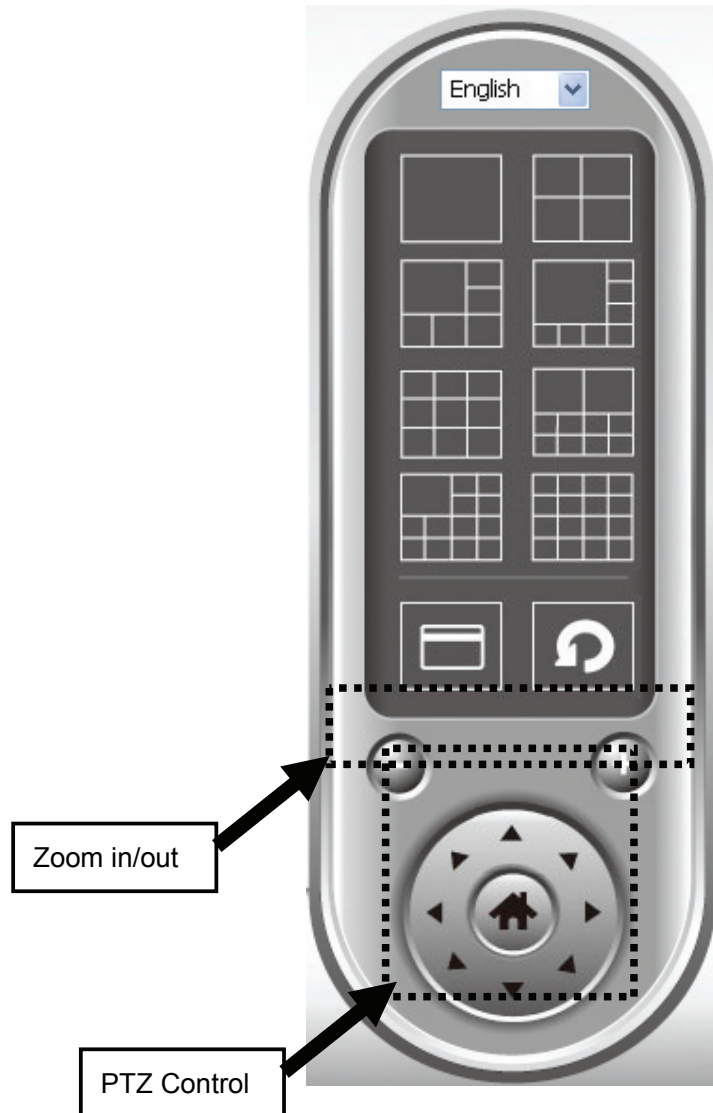

7.7. Snapshot

You can take a snapshot of the selected camera by clicking the designated button shown below.

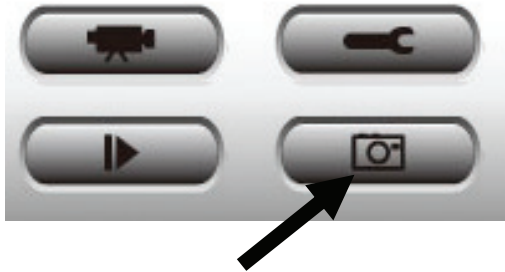

The snapshot images are saved in the data directory of the camera viewer as defined in the General Options section.

7.8. Recording


Click the button showing the video camcorder below to start the recording process. Recordings are split into chunks as defined in the General Options section.




To stop recording, click the button again.

7.9. Playback

You can play back all recorded video by clicking this button.

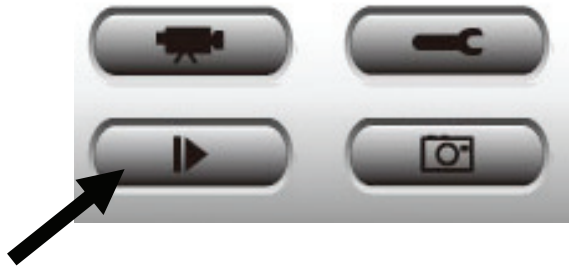

A new window will appear:

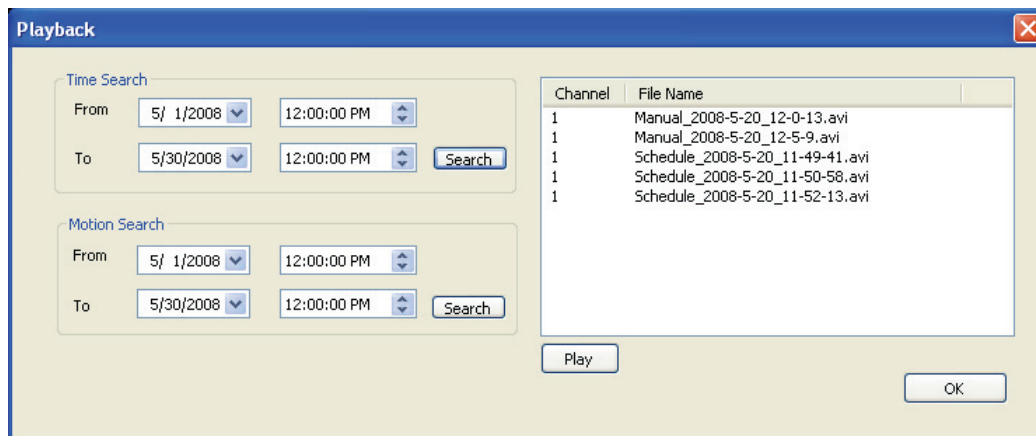

You have to locate the video file before you can play it. There are two ways of doing this: Time Search (search all video files which fall within a specific time period) and Motion Search (search all video files recorded by the motion detection function which fall in a specific time period).

Define the start and end date / time of the time period you wish to search, and then click "Search". The search results are shown on the right. Select a video and click "Play" to begin playback.

8. Web Connection and Setup

You can use the Web browser to connect the camera for viewing or setting. Open the web browser and enter the IP Address of the camera to establish a connection. The default IP Address of the camera is “**192.168.2.3**”.


When the welcome screen appears, enter the “Admin Name” and “Password”. The default values are:

Admin Name: “**admin**”


Password: “**1234**”



When the camera is connected, the browser will take you to the live video page. If you are viewing this camera at first time, the following dialog will appear to install the ActiveX plug in.

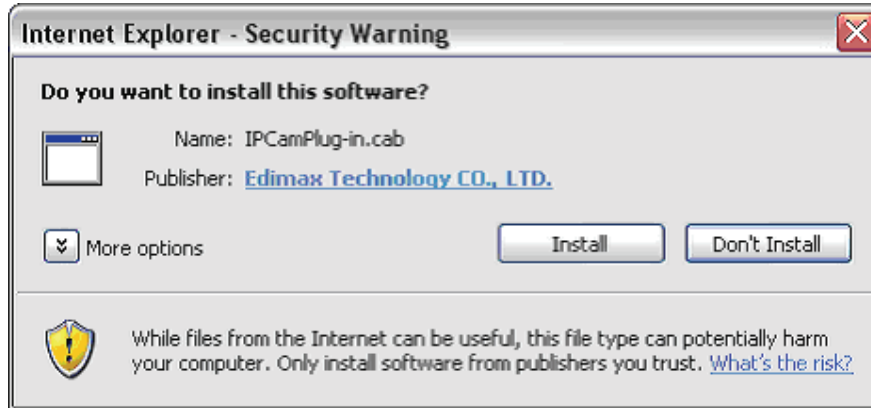

After installed the ActiveX plug-in, the video image will be shown up in the web screen directly.

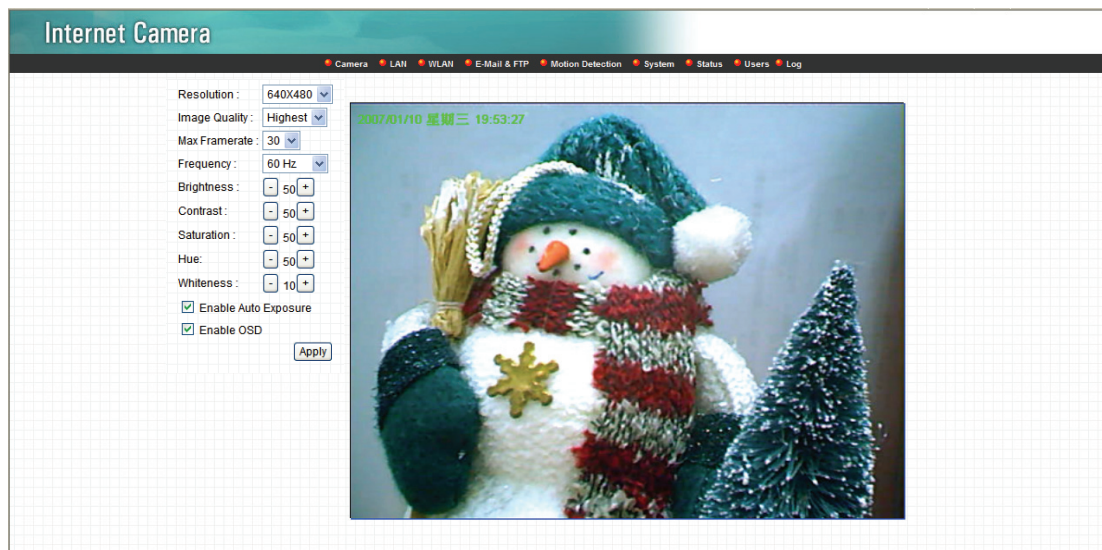

The menu options for the web control screen are as follows.

Camera – View live video and adjust the video format from the menu.

LAN – Setup the camera LAN port functions in the menu.

WLAN – Setup the camera WLAN port functions in the menu.

E-Mail & FTP – Setup the E-Mail client and FTP client in the menu.


Motion Detection – Configure the Motion Detection Actions here.

System – Setup System utilities and settings in this menu.

Status – Shows the camera information and current status in this page.

Users – This camera support up to 4 user accounts. You can setup them in this menu.

8.1. Camera Setting

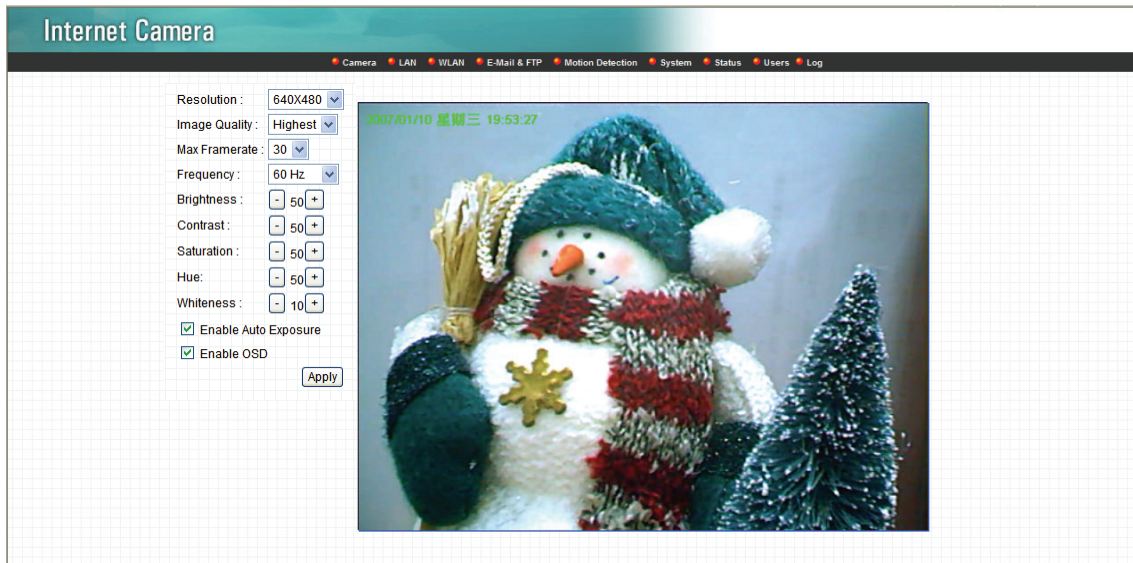

Camera Setting

- Resolution** Select the desired video resolution format. Larger resolution requires more bandwidth. 640 x 480 is “VGA” format. 320 x 240 is “CIF” format. The default resolution is CIF format.
- Image Quality** Adjust this property to control the video quality
- Max Frame Rate** Set the video max frame rate. This camera can support at most 30 frames per second. Set the frame rate higher can get video more smooth. But will use more bandwidth.
- Frequency** Adjust this property to fitting light frequency.
- Brightness** You can adjust the brightness of the video. If the video is too dark, you can input the larger number in this text box. The video will be brighter. This value can be from 1 to 100.
- Contrast** You can adjust the contrast by change the value. This value can be from 1 to 100.
- Saturation** You can adjust the saturation by change the value. This value can

be from 1 to 100.

Hue	You can adjust the hue by change the value. This value can be from 1 to 100.
Whiteness	You can adjust the white balance by change this value. This value can be from 10 to 30.
Enable Auto Exposure	You can enable Auto Exposure by check this box.
Enable OSD	You can enable or disable “Time Stamp” function in this item. When you disable “OSD” function, the “Time Stamp” will be hidden.
Apply	When you finish “AV Server” setting, click this button to validate the setting values.

8.2. LAN Setting

Internet Camera

Camera LAN WLAN E-Mail & FTP Motion Detection System Status Users Log

LAN

• Network Type : DHCP Static IP Address

• IP Address :

• Subnet Mask :

• Gateway :

• Primary DNS :

• Secondary DNS :

• Video Port :

• HTTP Port :

PPPoE

• Enable PPPoE : Enable Disable

• User Name :

• Password :

• MTU : (512<=MTU Value<=1492)

Dynamic DNS

• Enable DDNS : Enable Disable

• Provider :

• Host Name :

• User Name :

• Password :

UPnP

• Enable UPnP : Enable Disable

LAN

Network Type	This camera can obtain IP via DHCP protocol or specified static IP Address to it..
IP Address	Enter an unused IP Address within the IP address range used on your LAN. If the IP Address of your LAN is from the 192.168.2.0 to 192.168.2.250, you can set an unused IP Address from the range for the camera, for example: 192.168.2.250.
Subnet Mask	The Subnet Mask field must match the subnet setting on your LAN. For example: 255.255.255.0.
Gateway	The Gateway is used to forward frames to destinations in a different subnet on the Internet. The Gateway setting must be the

same with the gateway used by the PCs on your LAN.

DNS Server	DNS Server (Domain Name Server) that translates names to IP addresses. Set the same DNS Server as the PCs on your LAN.
Video Port	The AV Control Port is used to transmit or receive the AV streaming in the network. The default port setting is “4321”. If you want to view the video from the camera, the port setting should be correct.
Web Port	This camera support web connection, the default web port is 80. Since the web server may use port 80, you can use a different port for the camera. If you change the web port from 80 to 8080, you must type http://192.168.2.3:8080 to connect the camera through the web browser.
Apply	When you finish the “LAN”, click “Apply”.

PPPoE

Enable PPPoE	Enable or disable PPPoE function of the camera.
User Name	Enter the User Name for the PPPoE Connection.
Password	Enter the Password for the PPPoE Connection.
MTU	A maximum transmission unit (MTU) is the largest size packet or frame, specified in octets (eight-bit bytes), that can be sent in a packet or frame based network such as the Internet.
Apply	When you finish the “PPPoE” setting, click “Apply”.


Dynamic DNS

Enable DDNS	Enable or disable DDNS function of the camera.
Provider	Several companies provide DDNS service. This camera supports the service from DynDNS company.

Domain Name	The domain name given by DynDNS is “registername.dyndns.com”. Enter the domain name that you register for the camera from DynDNS web site.
User Name	Enter the login name for the DDNS service.
Password	Enter the password for the DDNS service.
Apply	When you finish the “Dynamic DNS” setting, click “Apply”.

UPnP

Enable UPnP	Enable or disable UPnP function of the camera.
Apply	When you finish the “UPnP” setting, click “Apply”.

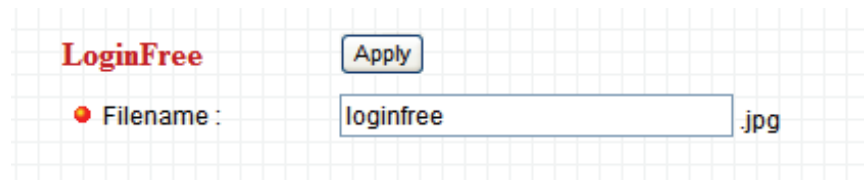

LoginFree

Filename	<p>The default value is “loginfree”. That’s mean user can get a snapshot image from Internet Explorer. The format is like:</p> <p>IP Camera will send a snapshot image to Internet Explorer. If user changed file name (Ex: “1234”), the URL must be changed to “http://192.168.2.3/1234.jpg”</p>
Apply	When you finish the “UPnP” setting, click “Apply”.

8.3. E-Mail and FTP

The “E-Mail & FTP” lets you setup E-Mail client and FTP client that camera can sent live video to your e-mail account or FTP server when Motion has been detected.

The screenshot shows the 'Internet Camera' configuration interface. At the top, there is a navigation bar with links for Camera, LAN, WLAN, E-Mail & FTP (which is highlighted), Motion Detection, System, Status, Users, and Log. Below the navigation bar, the 'E-Mail' section is visible, featuring an 'Apply' button and a 'Send a Test Email' button. The E-Mail configuration fields include: Recipient E-Mail Address, SMTP Server, Sender E-Mail Address, SMTP Authentication (with radio buttons for Enable and Disable, where Disable is selected), User Name, and Password. Below this, the 'FTP Configuration' section is shown, with an 'Apply' button and an 'Upload a test file' button. The FTP configuration fields include: FTP Server, FTP Port (set to 21), User Name, Password, Remote Folder, and Passive Mode (with radio buttons for Enable and Disable, where Enable is selected).

AV Server

Recipient E-Mail Address This camera supports “Motion Detection” function. Enter the E-Mail Account for receiving the pictures.

SMTP Server Enter the SMTP Server for the E-Mail sending.

Sender E-Mail Address Specified the e-mail address of the e-mail sender.

SMTP Authentication Enable or Disable the SMTP Authentication function

Username When Authentication is enabled, input the SMTP Username.

Password	When Authentication is enabled, input the password.
Send a Test Email	Press this button to send a test e-mail to your mailbox. You can use this function to test if your setting is correct.
FTP Server	This camera supports "Motion Detection" functions. When Motion Detection event occurred, you can record the pictures to FTP server. Enter the FTP address for receiving the pictures.
FTP Port	Enter the port of the FTP server.
User Name	Specify the user account of ftp server.
Password	Specify the Password of your ftp account.
Remote Folder	Specify the folder of the ftp site that you want to store the video.
Password	When Authentication is enabled, input the password.
Passive Mode	If your Camera is under NAT, you usually need to enable this feature.

8.4. Motion Detection

The “Motion Detection” allows users to setup the behavior of motion detection feature.

The screenshot shows the 'Internet Camera' web interface. At the top, there is a navigation bar with links for Camera, LAN, WLAN, E-Mail & FTP, Motion Detection (which is highlighted), System, Status, Users, and Log. Below the navigation bar, the 'Motion Detection' configuration page is displayed on a grid background. The page title is 'Motion Detection'. There is an 'Apply' button at the top right. The configuration options are:

- Enable Motion Detection : Enable Disable
- Motion Detection Interval : seconds
- Threshold : (dropdown menu)
- Send Recording File to E-Mail : Yes No
- E-Mail Subject :
- Send Recording File to FTP : Yes No

Motion Detection

Motion Detection Enable	Enable or Disable the Motion Detection Function.
Next Event Detected Interval	Setup the interval between two events. For example, if you setup the interval to 5 seconds, the next event will start after this event finished + 5 seconds.
Threshold	Setup the sensitivity of motion detection.
Send Recording File to E-Mail	Select Yes to send the recorded video file to your e-mail account that you had specified at “E-Mail & FTP” menu.
E-Mail Subject	Specify the subject of motion detection notify e-mail.
Send Recording File to FTP	Select Yes to send the recorded video file to your FTP server that you had specified at “E-Mail & FTP” menu.

8.5. System

The “System” allows users to setup the camera’s parameters, like camera name, data/time setting. And also provide firmware upgrade and reset tools at this page.

System

Camera Name	The default camera name is “IC1500”. It is recommended to name a meaningful name for the camera.
Login Name	Setup your administrator account’s login name. Default name is “admin”
Password	Enter up to 4 digits password for the new user account.
Confirm Password	Enter the password again to confirm the setting.
Set Date/Time manually	Display the current Date and Time.
NTP Server	Synchronize the Date and Time with this NTP server.

Time Zone	Select the time zone that your camera put on.
NTP Server	Specify the IP Address of the NTP Server.
Upgrade Firmware	You can upgrade camera's firmware via this function. Press the browse button, find the correct firmware and press upgrade.
Reset to Factory Defaults	If you want to reset all the camera settings to default, click this button.
Reboot Device	To reboot the NSC10 Network Camera, click "Reboot".
LED Setting	There are four LEDs to indicate the status of NSC10 Network Camera. If you want to secure the camera from noticing, you can turn off the LED light by clicking "LED Light OFF". To turn on the LED light, click "LED Light ON".

8.6. Status

The "Status" shows the current firmware version, uptime, system time and IP information of this camera.

The screenshot shows the 'Internet Camera' web interface with a navigation menu at the top containing: Camera, LAN, WLAN, E-Mail & FTP, Motion Detection, System, Status (highlighted), Users, and Log. The main content area is titled 'Status' and is displayed on a grid background. It is divided into three sections: 'Status', 'LAN', and 'PPPoE'. Each section contains a list of system parameters with their current values.

Status	
Firmware Version :	IC-1500Wg v1.14 (Aug 2 2006 10:18:45)
Device Uptime :	3 min 14 sec
System Time :	2006/08/03 07:53:17

LAN	
IP Address :	10.0.11.129
Subnet Mask :	255.255.255.0
Gateway :	10.0.11.1
DNS Server :	192.168.1.2; 168.95.1.1
MAC Address :	00:00:10:11:12:00
Video Port :	4321
HTTP Port :	80

PPPoE	
Link Status :	Disconnected
IP Address :	
Subnet Mask :	
Gateway :	
DNS Server :	

8.7. Users

The “Users” allows users to add four user accounts which are able to view video from Camera Viewer and Web Management. These users, unlike Administrator, are not allowed to configure the camera.


The screenshot shows the 'Users' configuration page in the 'Internet Camera' web interface. The page has a teal header with the title 'Internet Camera' and a navigation bar with icons for Camera, LAN, WLAN, E-Mail & FTP, Motion Detection, System, Status, Users, and Log. The main content area is titled 'Users' and contains four identical user configuration sections. Each section includes a radio button to 'Enable' or 'Disable' the user, followed by input fields for 'Login', 'Password', and 'Confirm password', and an 'Apply' button.

User 1 / 2 / 3 / 4

User #	Enable or Disable the user number #.
Login	Enter the the login name to the camera.
Password	Enter up to 4 digits password for the new user account.
Confirm Password	Enter the password again to confirm the setting.
Apply	Click “Apply” to save the user account setting.

8.8. Log

The “Log” allows users to monitor the device event and time. If you have trouble to use this device, the log file will help administrator to know the status of device.

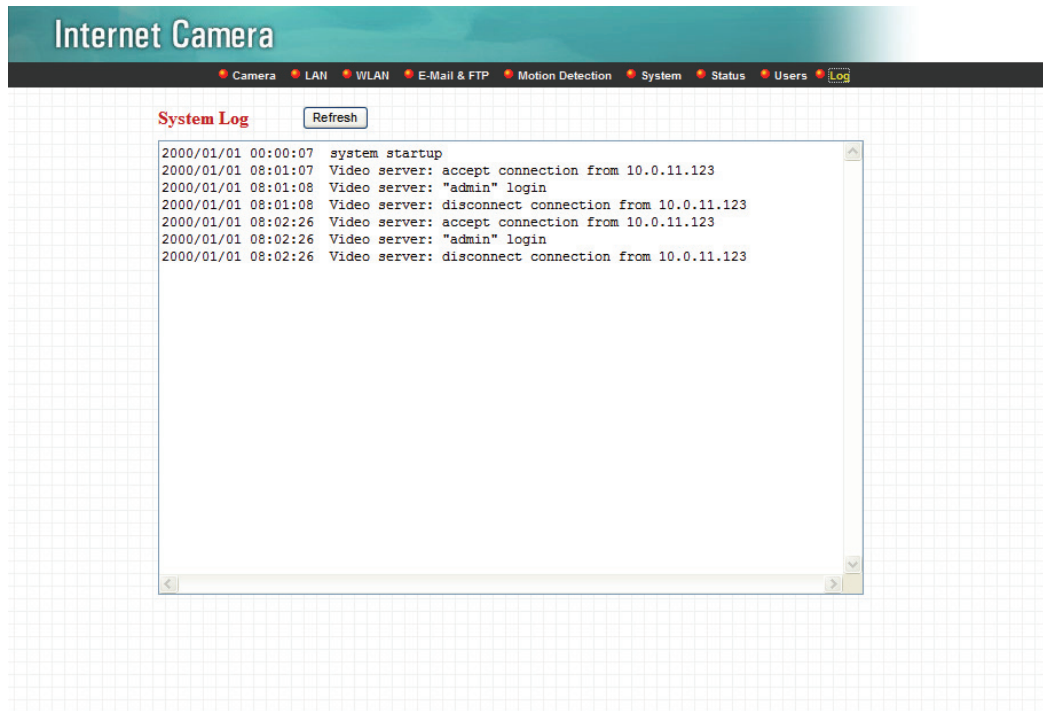

Log

Log screen

The screen will show event and event time of device.

Refresh

You can press “Refresh” button to refresh the log screen.

9. Frequently Asked Questions

Q1: What is a NSC10 Network Camera?

A: The NSC10 Network Camera is a standalone system connecting directly to an Ethernet or Fast Ethernet network. It is different from the conventional PC Camera; the NSC10 Network Camera is an all-in-one system with built-in CPU and web-based solutions providing a low cost solution that can transmit high quality video images for monitoring. The NSC10 Network Camera can be managed remotely, accessed and controlled from any PC/Notebook over the Intranet via a web browser or camera viewer.

Q2: What algorithm is used to compress the digital image?

A: The NSC10 Network Camera utilizes MJPEG video compression technology to provide high quality images. MJPEG is a standard for video compression and can be applied to various application software.

Q3: Can I capture or record still images from the NSC10 Network Camera?

A: Yes, you are able to capture or record still images with the snapshot function from the Camera Viewer application supplied with the NSC10 Network Camera CD-ROM.

Q4: What network cabling is required for the NSC10 Network Camera?

A: The NSC10 Network Camera uses Category 5 UTP Twisted-pair cable allowing 10 Base-T and 100 Base-T networking.

Q5: Can the NSC10 Network Camera be setup as a PC-cam on the computer?

A: No, the NSC10 Network Camera is used only on Ethernet and Fast Ethernet network.

Q6: Can the NSC10 Network Camera be connected on the network if it consists of only private IP Addresses?

A: Yes, the NSC10 Network Camera can be connected to a LAN with private IP Addresses.

Q7: The focus on the NSC10 Network Camera is bad, how can I correct it?

A: Adjust the NSC10 Network Camera focus manually.

10. Technical Specifications

■ Video specification

Max Resolution: 640 x 480 pixels

Sensor: 300K pixels 1/4" color CMOS sensor

Gain control: Automatic

Exposure: Automatic

White Balance: Automatic

Focal Length: 4.8 mm

Aperture: F=1.8

■ Image (Video Setting)

Image compression: MJPEG Image Video

Digital 24-bit Color

Frame rate: 30fps@QVGA, 20fps@VGA

Video resolution: 176 x 144, 320x240, 640x480

■ System Hardware

LAN Connector: One RJ-45 port to connect to 10/100Mbps Ethernet

Wireless: IEEE 802.11b/g(*Wireless Model Only)

LED Indicator: LAN LED (Green), WLAN LED (Amber), Power LED (Blue)

Power Supply: 12V / 1A (Wireless Model)

Power Supply: 12V / 0.4A (Wired Model)

■ HTTP/Utility

Includes easy-to-use Viewer & Recorder utility

Provides Admin utility & WEB browser Management

View multiple cameras simultaneously - Up to 16 cameras at a time

Manual/Schedule Record, Video Playback/Stop/Forward/Pause

Supports four additional user accounts for viewing camera

Auto sending Snap Shot by E-mail or FTP

Support DDNS and UPnP functions

Supports Windows 2000/XP/2003/Vista

Firmware Upgradeable


■ EMI & Safety

FCC, CE!

11. Appendix A Router/Gateway Setup for Internet

Viewing

To view NSC10 Network Camera across the Internet, you have to make sure Router/Gateway has configured to pass incoming TCP/UDP connections from remote PC to the NSC10 Network Camera. The Router/Gateway should set port forwarding or virtual server for the connections. Please see the illustration as below.

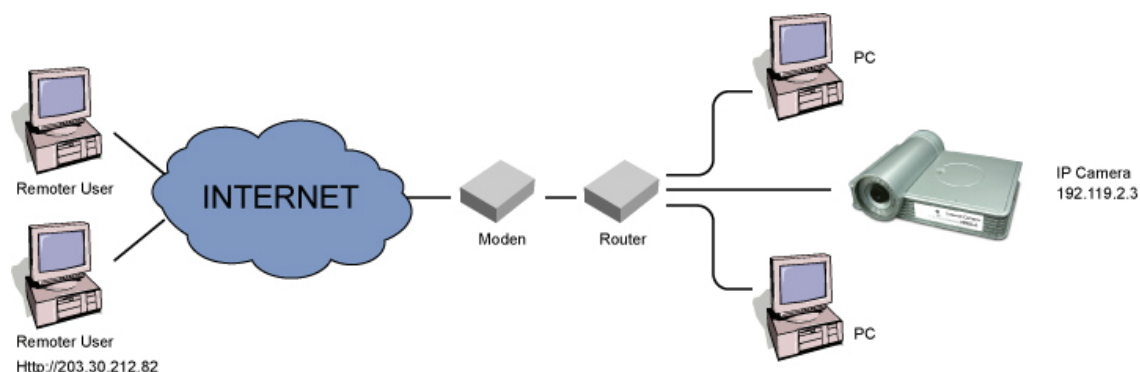

Router/Gateway Port Forwarding/Virtual Server Setup

Name	Protocol	Port	LAN IP
Setup 1	TCP	80	192.168.2.3
Setup 2	TCP	4321	192.168.2.3

Port Definition

- Setup 1 It is the port of Web port. You have to configure the protocol to "TCP".
- Setup 2 It is the port of Video port. You have to configure the protocol to "TCP".
- Setup 3 It is the port for NSC10 Network Camera and Administrator Utility communication. The protocol setting should be "UDP".

Viewing NSC10 Network Camera via Web Browser

- Setup 1/Setup 2 If you want to view the video via Web Browser, you have to ensure the Router/Gateway has configured setup1 and setup 2. If the web port is not default port "80", but changed to 8080. The remote user has to enter `http://203.30.212.82:8080`.

Viewing NSC10 Network Camera via Camera Viewer Utility

Setup 2 If you want to use Camera Viewer Utility to view the camera, please make sure the Router/Gateway has configured setup2.


Setup NSC10 Network Camera via Administrator Utility

Setup 3 If you want to use Administrator Utility to configure the NSC10 Network Camera via Internet, the Router/Gateway should configure setup 3.

12. Appendix B Set up WLAN step by step

Please follow the procedures below:

(1) Please Check you Router Wireless settings, Suggesting Open System (Disable security) first.

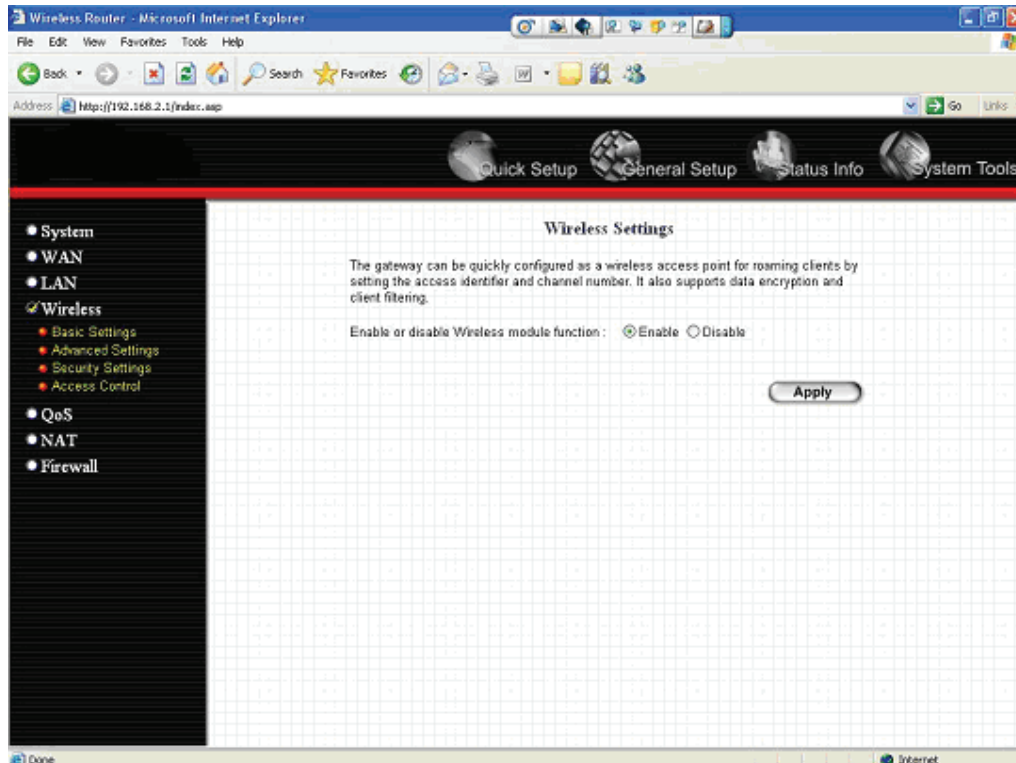

Wireless Router - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Address http://192.168.2.1/index.asp

Quick Setup General Setup Status Info System Tools

- System
- WAN
- LAN
- Wireless
 - Basic Settings
 - Advanced Settings
 - Security Settings
 - Access Control
- QoS
- NAT
- Firewall

Wireless Setting

This page allows you to define ESSID, and Channel for the wireless connection. These parameters are used for the wireless stations to connect to the Access Point.

Mode :	AP
Band :	2.4 GHz (B+G)
ESSID :	
Channel Number :	11
Associated Clients :	Show Active Clients

Apply Cancel

Wireless Router - Microsoft Internet Explorer

File Edit View Favorites Tools Help

Address http://192.168.2.1/index.asp

Quick Setup General Setup Status Info System Tools



- System
- WAN
- LAN
- Wireless
 - Basic Settings
 - Advanced Settings
 - Security Settings
 - Access Control
- QoS
- NAT
- Firewall

Advanced Settings


These settings are only for more technically advanced users who have a sufficient knowledge about wireless LAN. These settings should not be changed unless you know what effect the changes will have on your Broadband router.

Authentication Type :	<input type="radio"/> Open System <input type="radio"/> Shared Key <input checked="" type="radio"/> Auto
Fragment Threshold :	2346 (255-2346)
RTS Threshold :	2347 (0-2347)
Beacon Interval :	100 (20-1024 ms)
Data Rate :	Auto
Preamble Type :	<input checked="" type="radio"/> Long Preamble <input type="radio"/> Short Preamble
Broadcast ESSID :	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
IAPP :	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
802.11g Protection :	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled

Apply Cancel

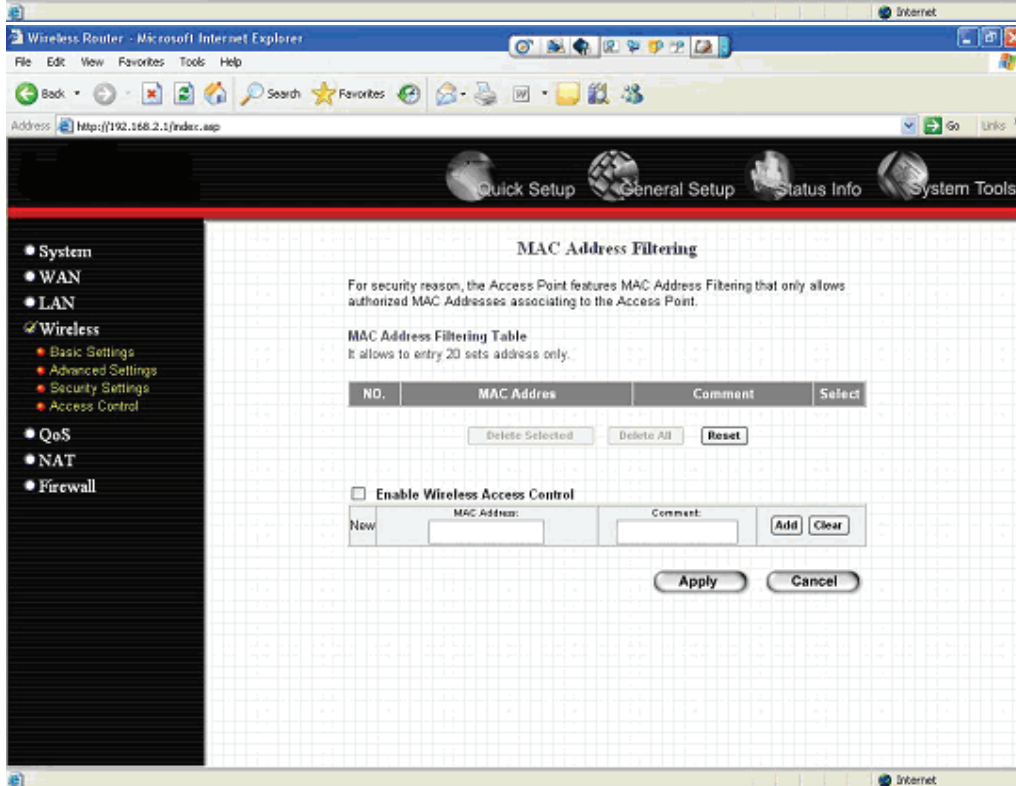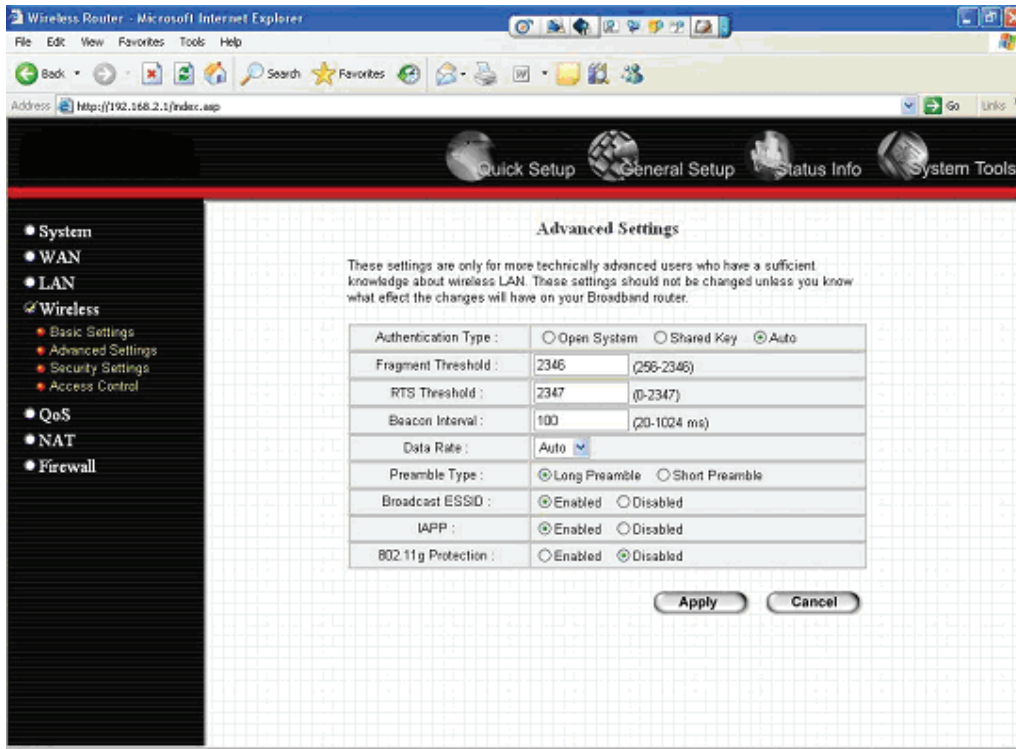

(2) Please turn on DHCP Server of the Router for this testing.

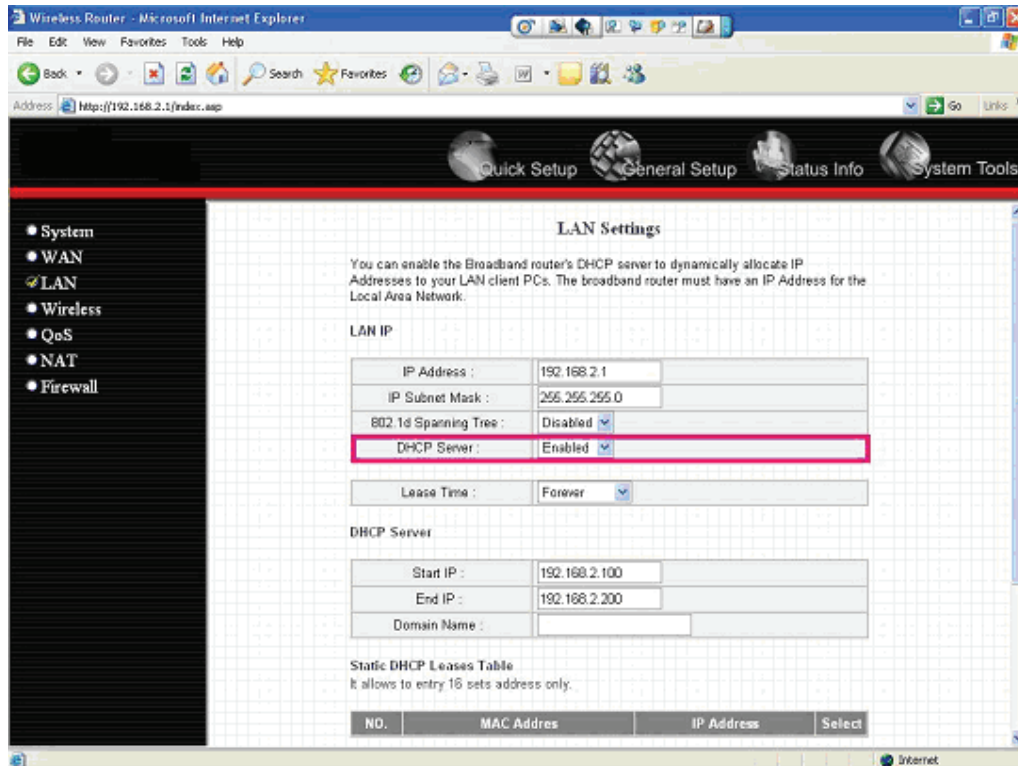

(3) Please reset the Wireless IP Camera settings to Factory Defaults by press the Reset button over 8 seconds.


(4) Please change your PC's IP address to 192.168.2.xx (which xx from 10 to 253), Netmask = 255.255.255.0

(5) Please go to Web-Config WLAN section of the Wireless IP Camera.

Press Refresh button until you find the SSID you want in the list first!

Then select the Connect column of the SSID you want and select the Enable button of Wireless Connection.

Press Apply button.

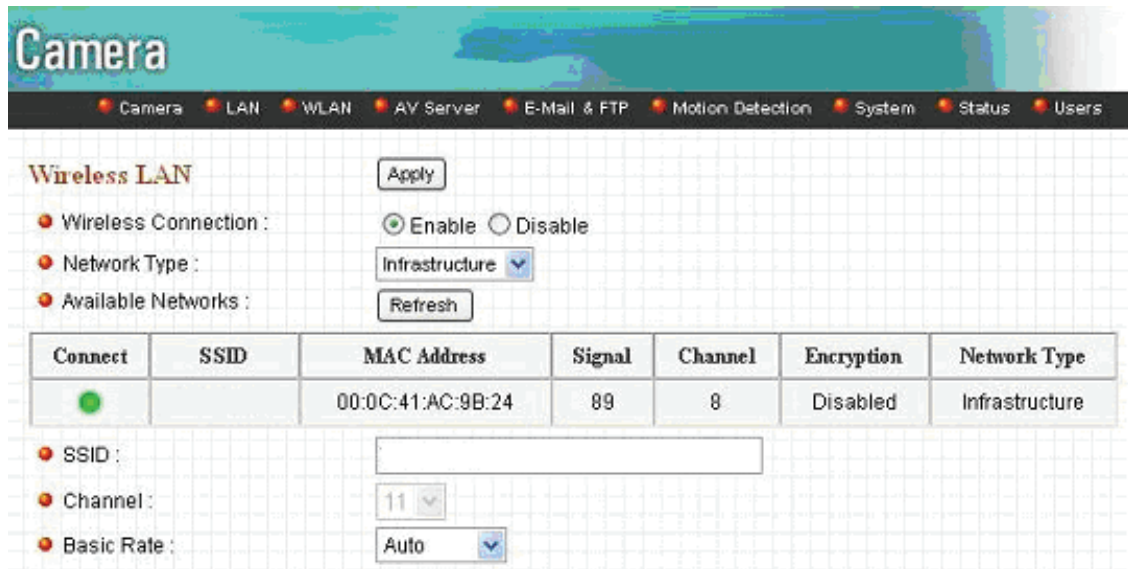


Wireless LAN

Wireless Connection : Enable Disable
 Network Type : Infrastructure
 Available Networks :

Connect	SSID	MAC Address	Signal	Channel	Encryption	Network Type
<input checked="" type="radio"/>		00:0C:41:AC:9B:24	89	8	Disabled	Infrastructure

SSID :
 Channel : 11
 Basic Rate : Auto

- (6) Please go to the LAN section of Web-Config. Select DHCP and press Apply button. Then you could close this IE browser window now.

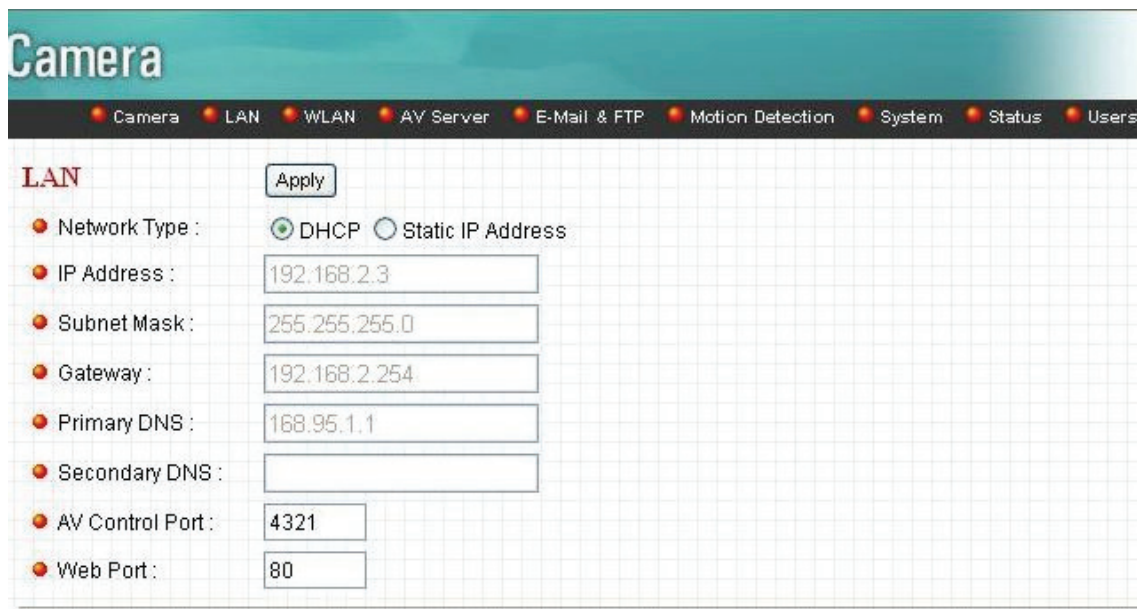

LAN

Network Type : DHCP Static IP Address
 IP Address : 192.168.2.3
 Subnet Mask : 255.255.255.0
 Gateway : 192.168.2.254
 Primary DNS : 168.95.1.1
 Secondary DNS :
 AV Control Port : 4321
 Web Port : 80

- (7) Please UNPLUG the Ethernet Cable of the Wireless IP Camera now!
- (8) Wait for seconds then the Wireless IP Camera should be linked with the Wireless Router.


- (9) Now you could let your PC to be connected with the Wireless Router.

- (10) In this case, if your PC's DHCP Client IP is 192.168.8.101, then the Wireless IP Camera must be 192.168.8.100, because Wireless IP Camera was got IP early then your PC.

- (11) You could go to the Web-Interface of the Wireless IP Camera.

13. Appendix C Viewing via UPnP in Windows XP


When the UPnP function is enabled, the camera can be detected by UPnP compliant system such as Windows XP. The camera will be displayed in the Neighborhood of Windows XP, so you can directly double click the camera or right click the camera and select “Invoke” to view the video through web browser.

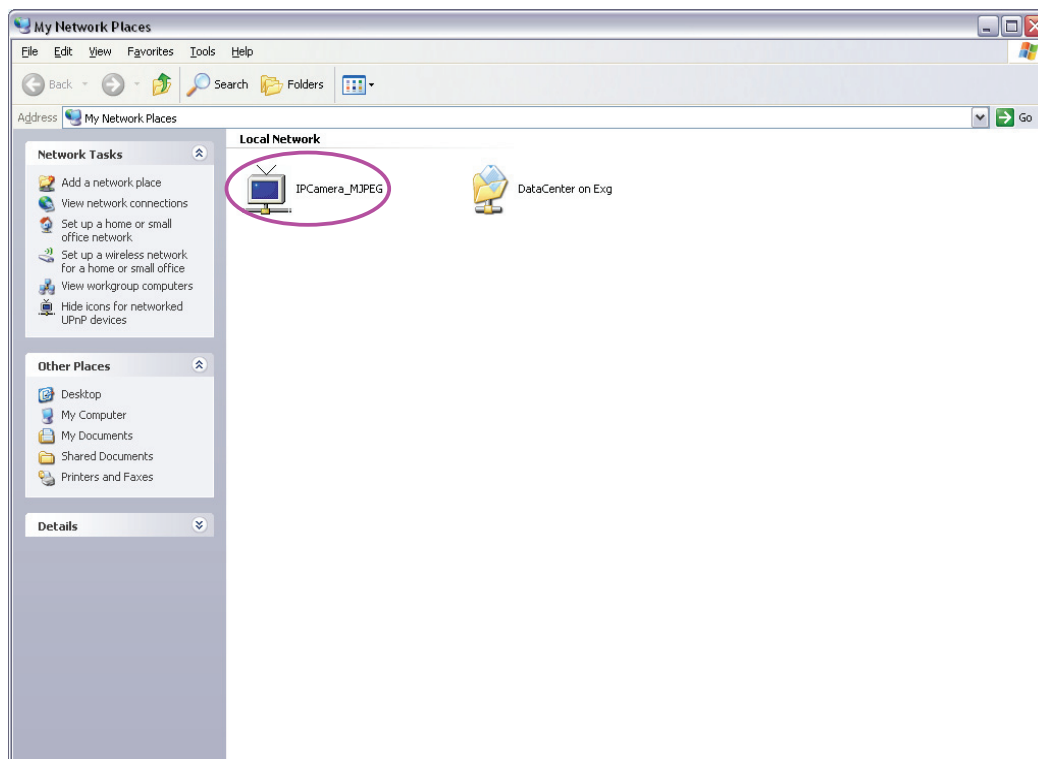




Enable UPnP in Windows XP SP2


If you can't find the camera in the Neighborhood of Windows XP SP2 or you have seen the following message when you double click the camera. You have to check if UPnP function is blocked by the firewall. Please follow the steps below to enable it.

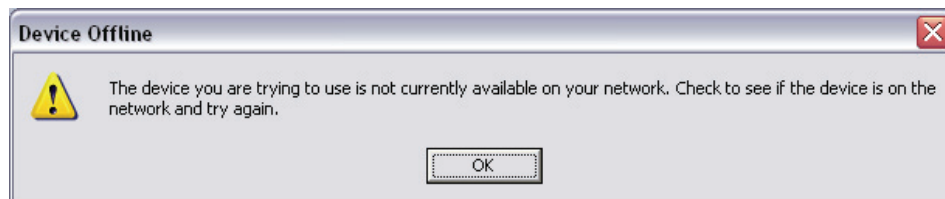


1. Go to "Start\Settings\Network Connections".
2. Right click the "Local Area Connection" and select "Properties".
3. In the "Local Area Connection Properties", select "Advanced" option menu and click "Settings".

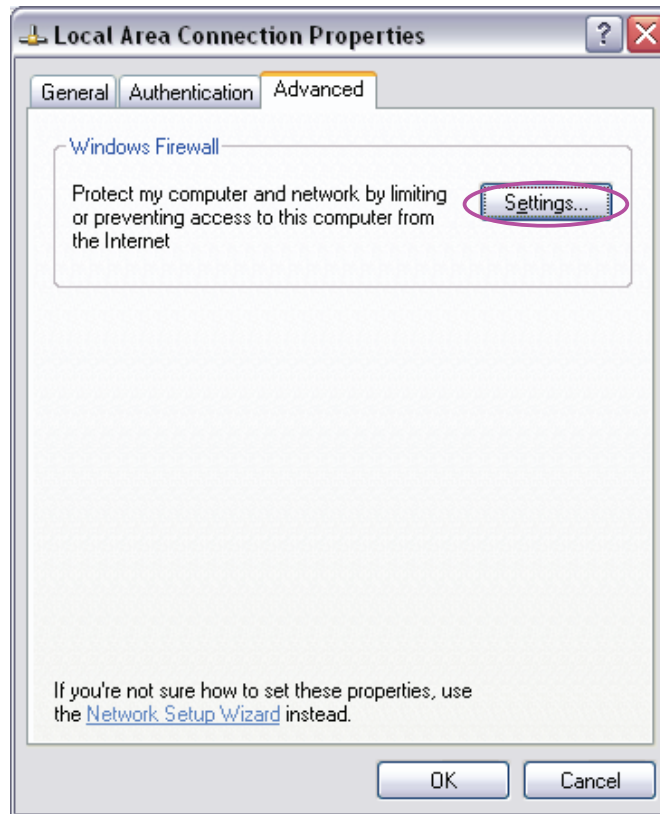

4. The "Windows Firewall" screen will be popped up, select "Exceptions" option menu.

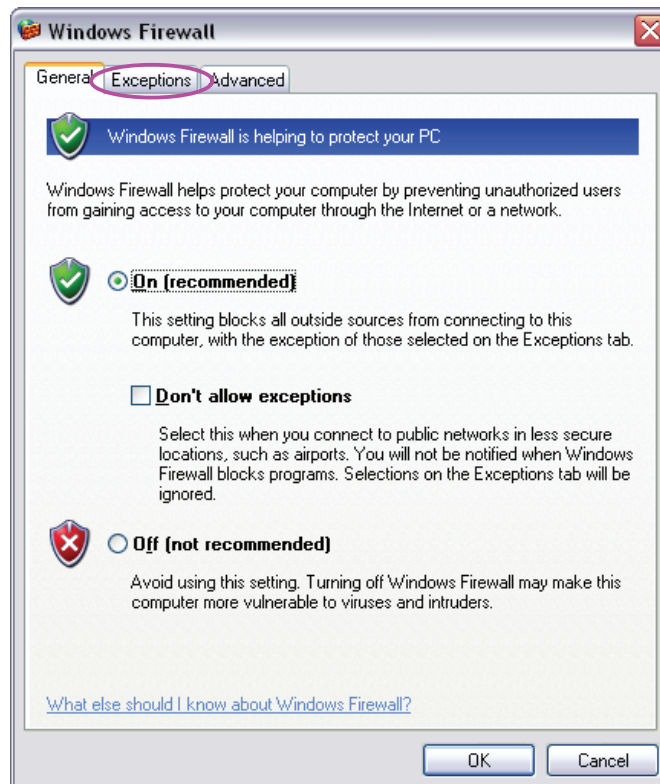


5. Enable "UPnP Framework" from the "Programs and Services list" and click "OK".

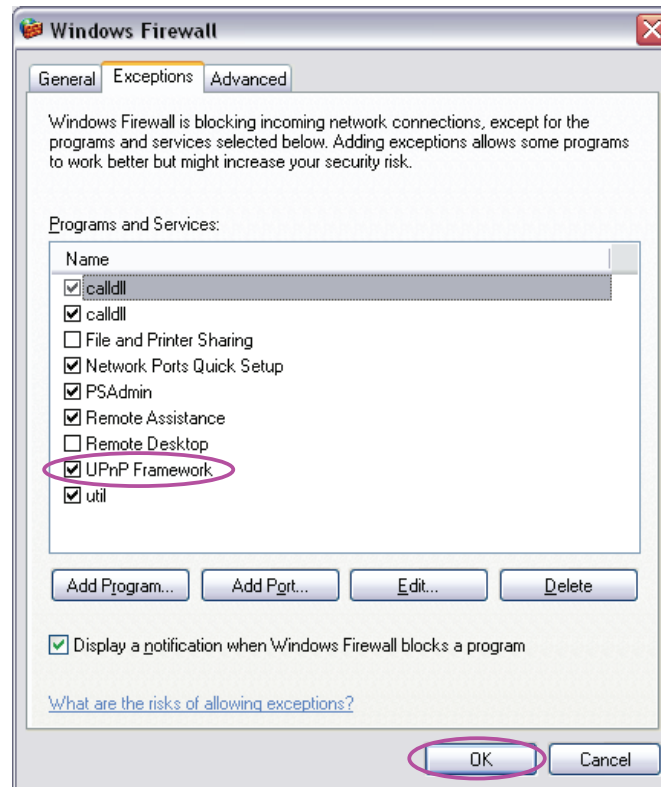

14. Appendix D Configure Windows 2003 Server


Graphics Hardware Acceleration and DirectX are disabled by default on a Server configuration to ensure maximum stability and uptime. But for any reason you need to enable them to use DirectX enabled applications this section will guide you through on how you can do it.

Enabling Graphics Hardware Acceleration

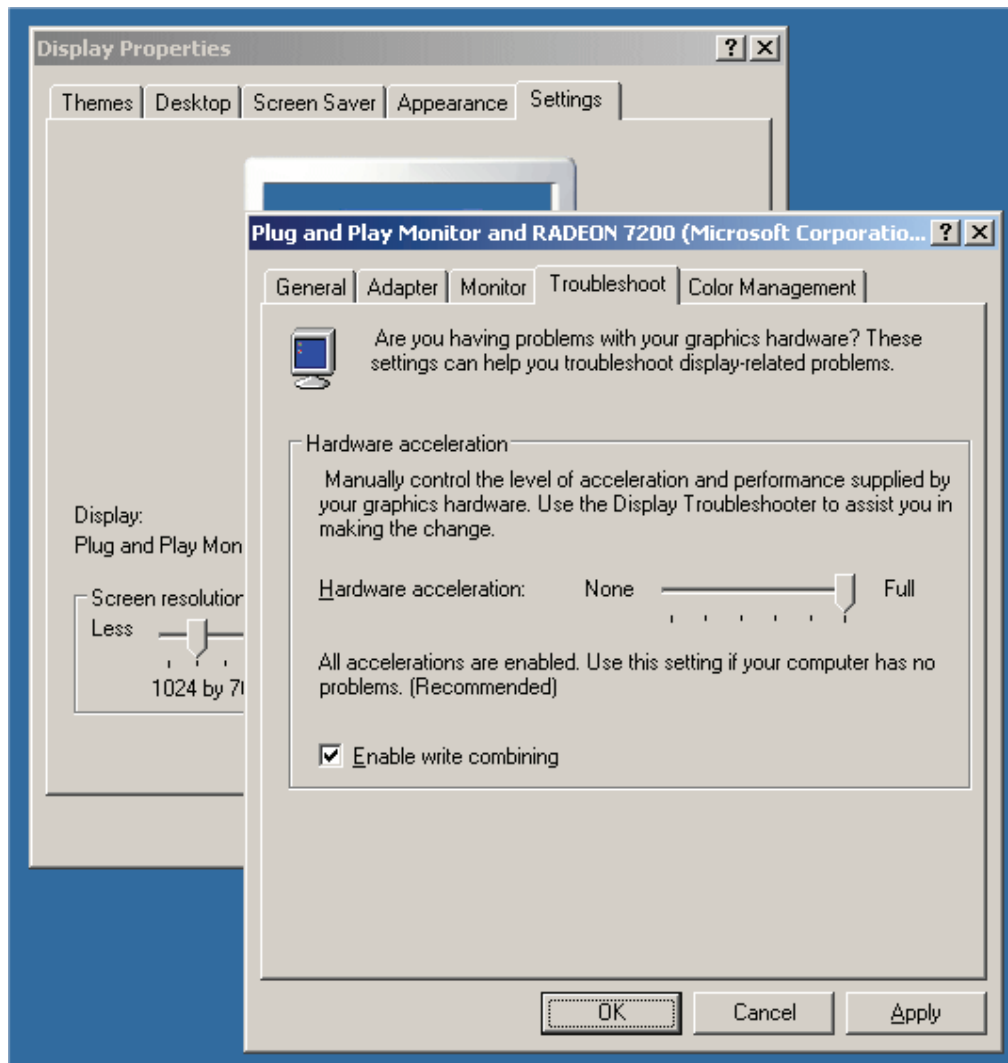

1. Simply right click anywhere on your desktop and select Properties -> Settings tab -> Advanced -> and finally, the Troubleshoot tab.
2. Now move the Hardware acceleration slider across to Full
3. Click OK
4. You may experience a monitor black out for a few seconds, this is normal.

Enabling DirectX

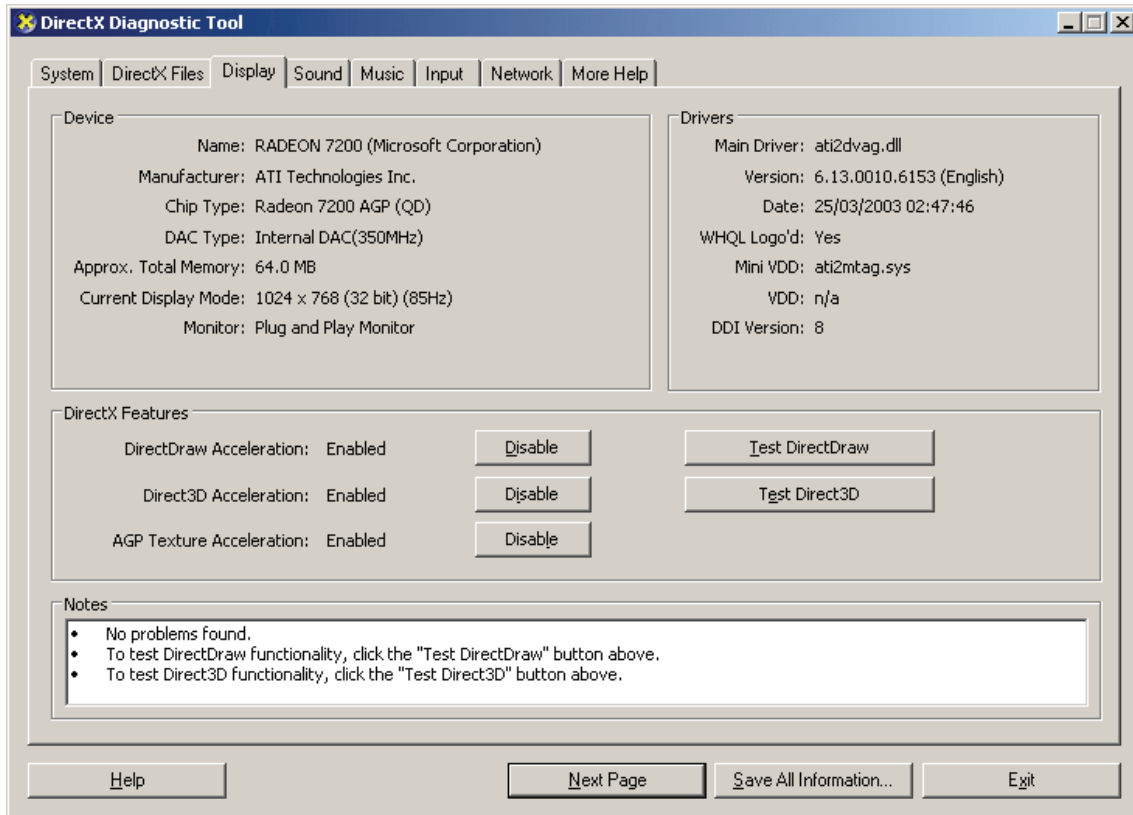

5. go to Start -> Run -> and type dxdiag followed by enter. You will get a dialog box asking if you want to allow dxdiag to access the internet to check for valid WHQL certificates - click on Yes.
6. Let's click on the Display tab, now click on all three boxes to enable DirectDraw, Direct3D and AGP Texture Acceleration.



INTELLINET[™]

NETWORK SOLUTIONS

INTELLINET NETWORK SOLUTIONS[™] offers a complete line of active and passive networking products.

Ask your local computer dealer for more information or visit

www.intellinet-network.com

Copyright © INTELLINET NETWORK SOLUTIONS

All products mentioned are trademarks or registered trademarks of their respective owners.